
ASSEMBLY INSTRUCTIONS

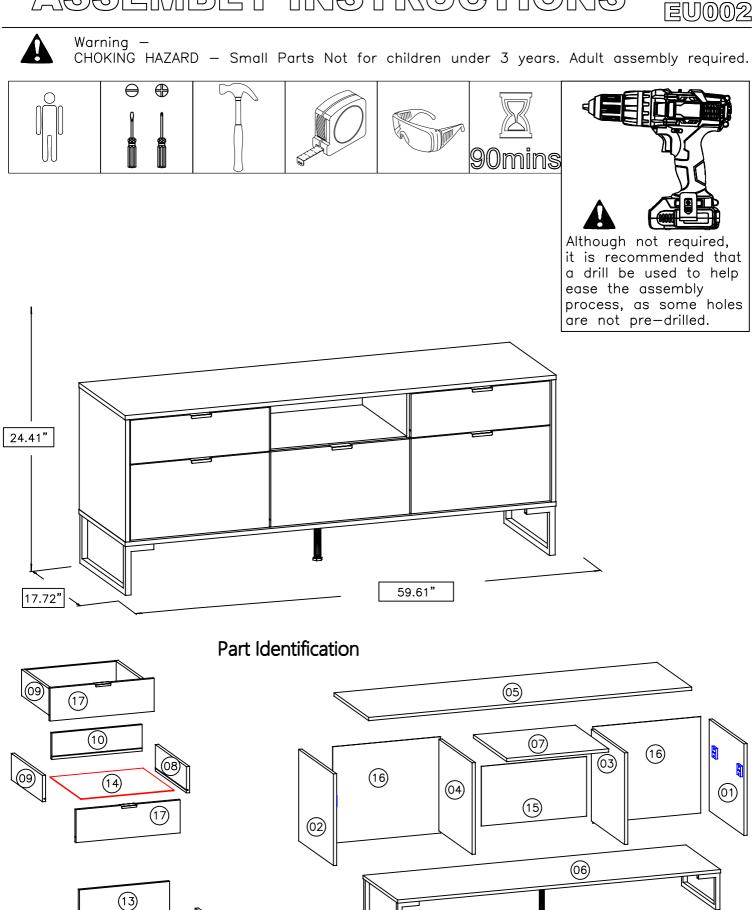


(19)

(14)

(18)

List of pieces						
Code	Description	Amount	Length (in.)	Width (in.)	Thickness (in.)	Вох
01	Right side panel	1	16.46"	17.60"	.59"	Α
02	Left side panel	1	16.46"	17.60"	.59"	Α
03	Right partition	1	16.46"	16.85"	.59"	Α
04	Left partition	1	16.46"	16.85"	.59"	Α
05	Top panel	1	59.61"	17.60"	.59"	Α
06	Base panel	1	59.61"	17.60"	.59"	А
07	Shelf	1	18.82"	16.85"	.59"	Α
08	Right side of drawer	2	15.75"	4.72"	.59"	Α
09	Left side of drawer	2	15.75"	4.72"	.59"	Α
10	Back of drawer	2	16.65"	4.72"	.59"	Α
11	Rigth larger drawer side	1	15.75"	7.09"	.59"	А
12	Left larger drawer side	1	15.75"	7.09"	.59"	Α
13	Largest drawer headboard	1	16.65"	7.09"	.59"	Α
14	Bottom drawer	3	17.17"	15.67"	.12"	Α
15	Bottom smaller	1	19.41"	10.71"	.12"	Α
16	Bottom larger	2	19.88"	17.32"	.12"	А
17	Front drawer	2	19.21"	5.91"	.59"	Α
18	Largest drawer front	1	19.21"	10.12"	.59"	А
19	Doors	2	19.21"	257	.59"	А

Prior to assembly, please ensure that all the Panels listed below are complete. If any pieces are missing or damages, please contact us directly at our Email <u>CS@K1intlgrp.com</u> or Toll—free 1—877—250—2820

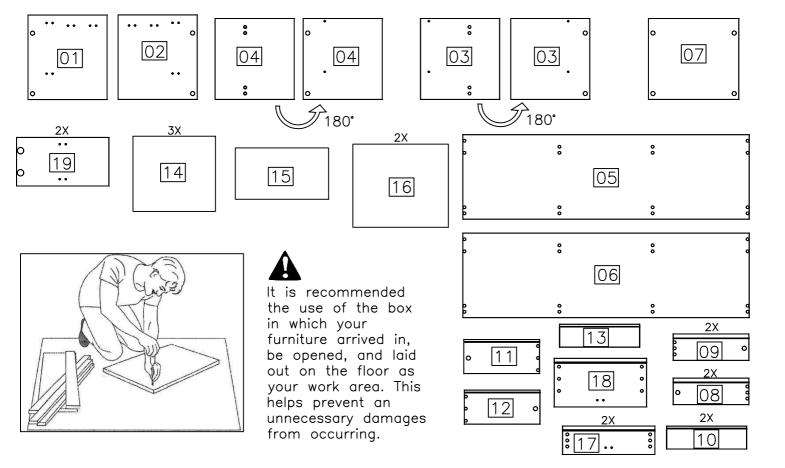



	Hardware				
	Code	Description		Amou.	
Α	30945		Cam Screws	18	
В	30950		Cam Locks	18	
С	226	♣ ☐	Screw 4x40	14	
D	379	⊕ (<u> 111111111</u>	Screw 4,0X30	8	
E	1802		Dowel 6x30mm	44	
F	5256	♣	Screw 4,0x20	6	
G	4214		Screw 3,5x14	58	
Н	107		Nail 10x10	33	
		Anti-tipping installation			
I	55606		Mounting bracket	2	
J	55607		Clamp	1	
К	51980	♣	Screw 4,5x50	2	
L	1178		Parafuso/ Tornillo/ Screw 3,5x16 BC	2	
М	32069		Adapter sleeve	2	

N	43136	Metal slide 350mm	3
0	EBPR1=39999 (Preto fosco) GIBR1=40726 (Branco fosco) ITAR1=54043 (Off White)	Handle 70mm	5
Р	EBPR1=55389 (Preto fosco) GIBR1=55387 (Branco fosco) ITAR1=55388 (Off White)	Metal foot tube	2
Q	EBPR1=47696 (Preto fosco) GIBR1=43447 (Branco fosco) ITAR1=55303 (Off White)	Central foot	1
R	EBPR1=50493 (Ebano Grigio) GIBR1=45005 (Giando) ITAR1=40392 (Itapuã)	Screw cap cover 19mm	18
S	EBPR1=09399 (Ebano Grigio) GIBR1=22659 (Gianduia) ITAR1=40391 (Itapuã)	Screw cap cover 13mm	14
Т	EBPR1=55287 (Preto) GIBR1=55558 (Branco) ITAR1=55287 (Preto)	Retractor	4
U	18458	Black triangular support	6
٧	1423	Shore Fixer	6


W	05123	Hinge 35mm	4
×	05123	Shim	4
Υ	05123	Hinge screw4,0x14	16


01 Saco médio para acessórios	(Internal production data)
01 Saco médio para puxador	(Internal production data)

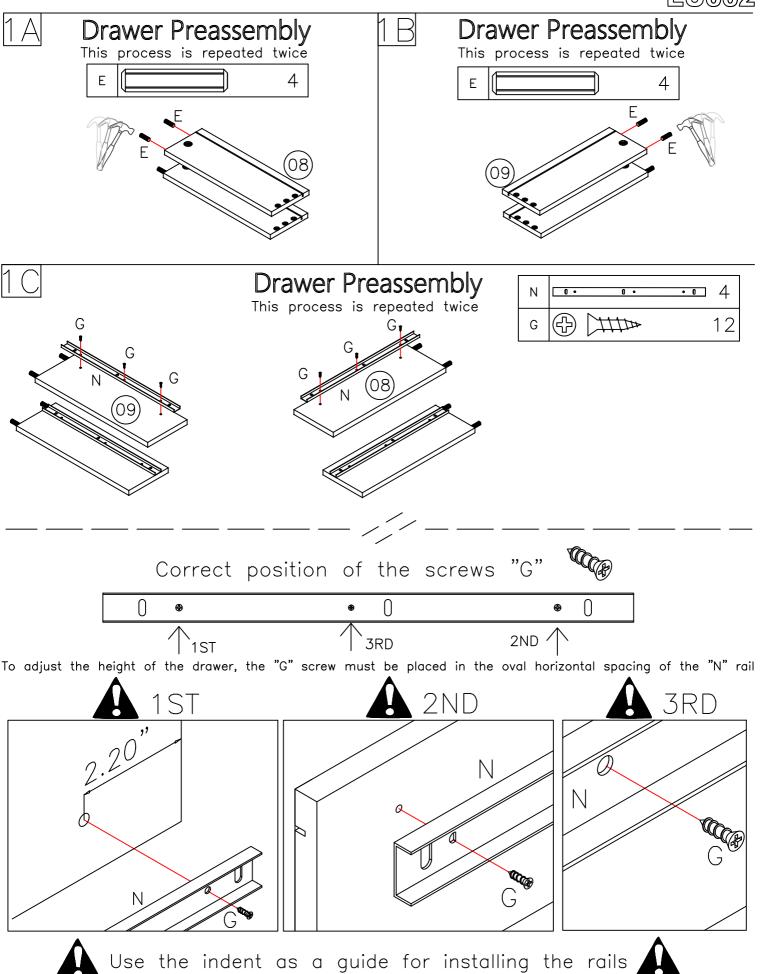


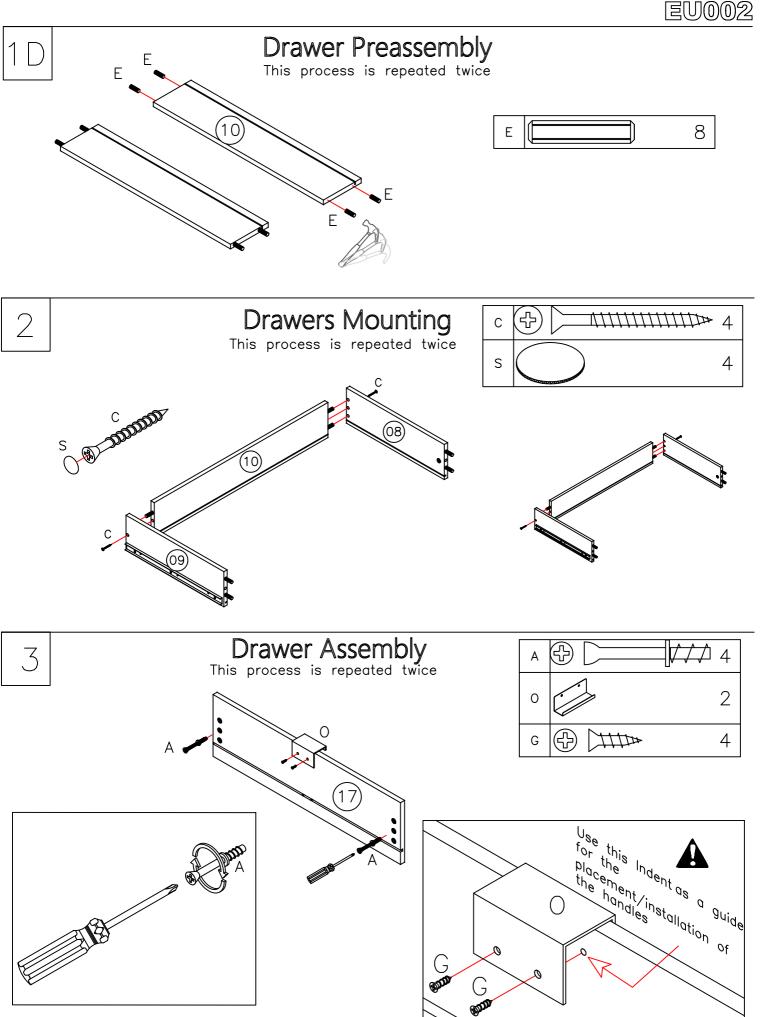


CS@K1intlgrp.com or Toll-free 1-877-250-2820

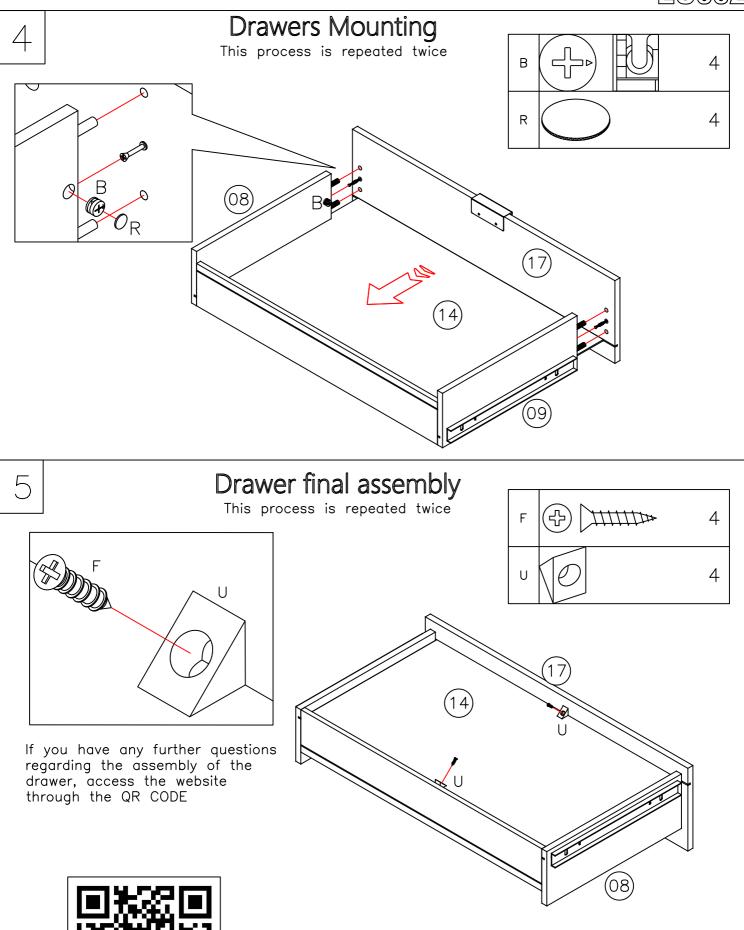

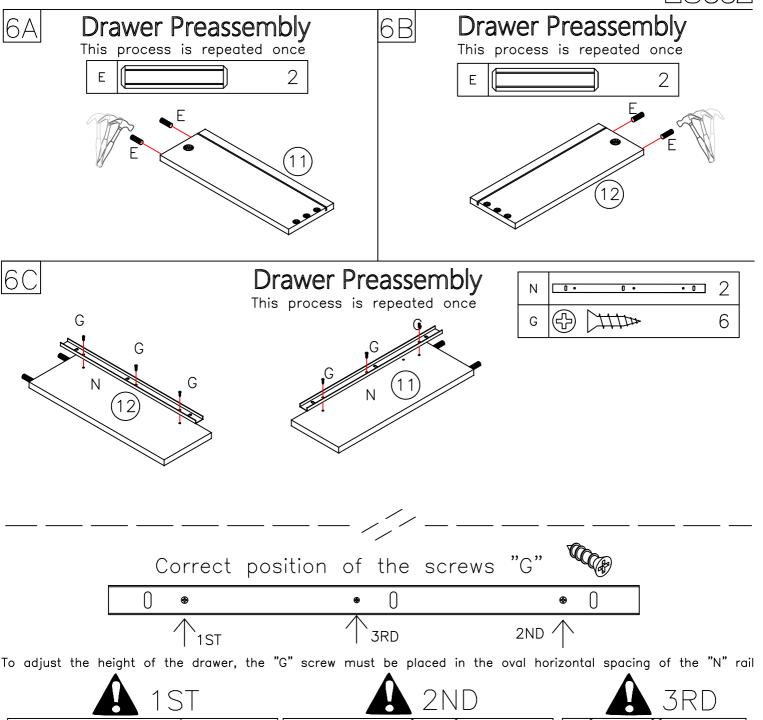


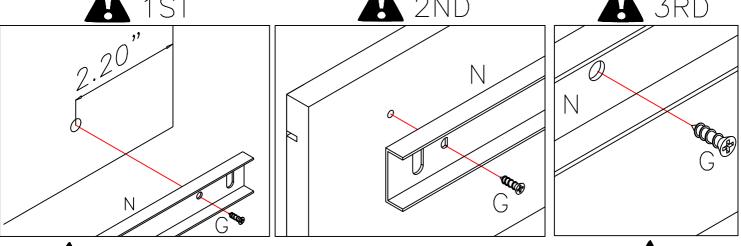

Use the indent as a guide for installing the rails

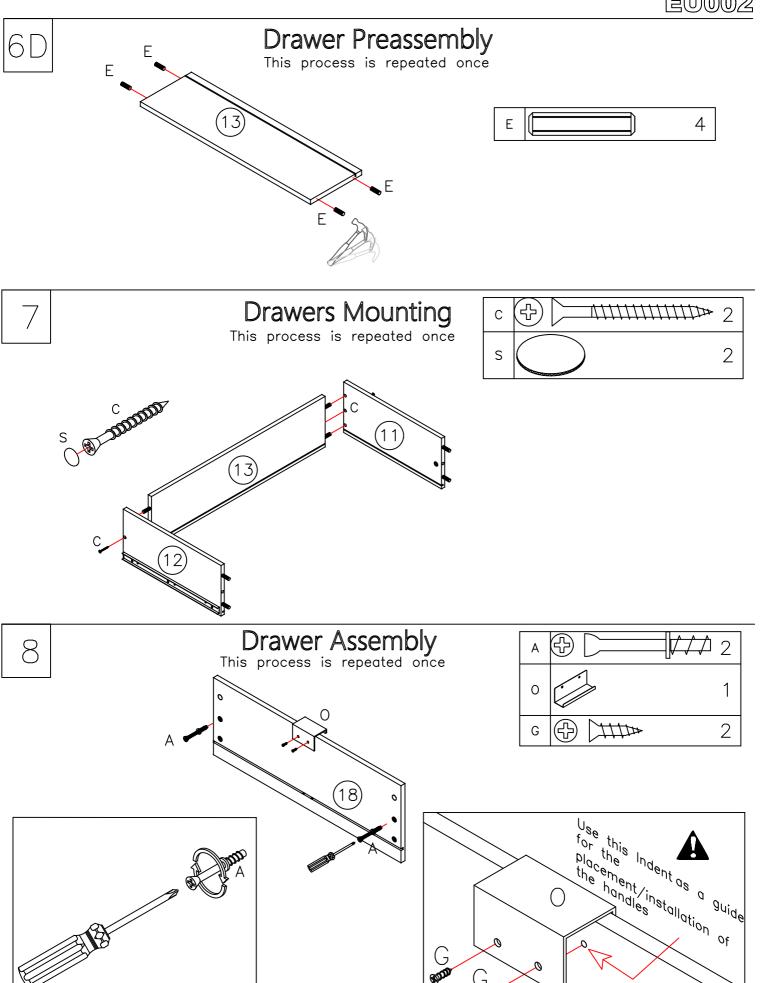



CS@K1intlgrp.com or Toll-free 1-877-250-2820

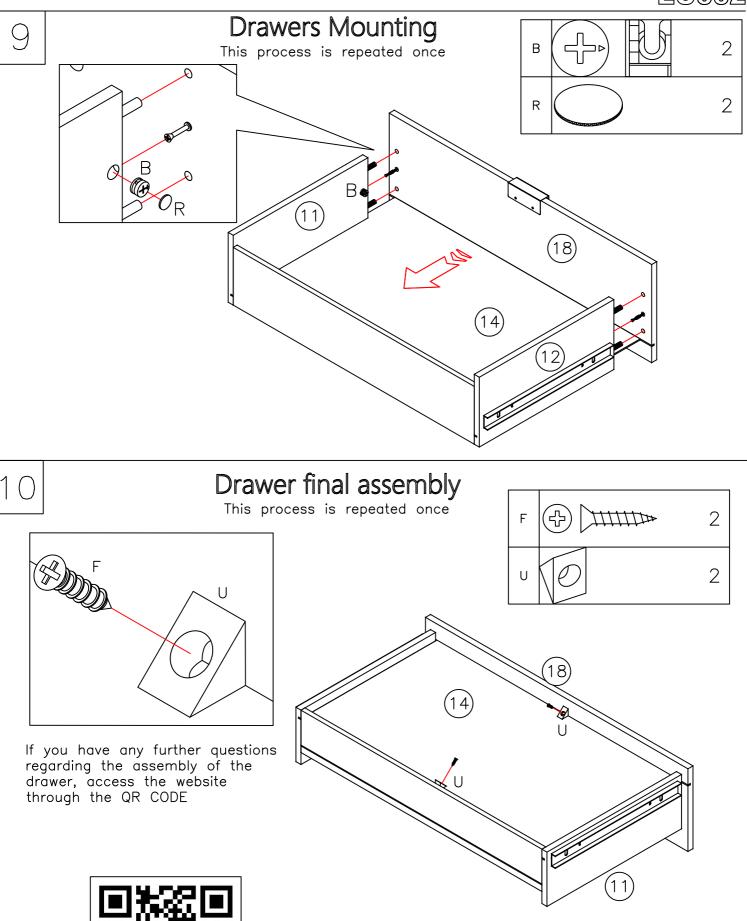


Preassembly of parts




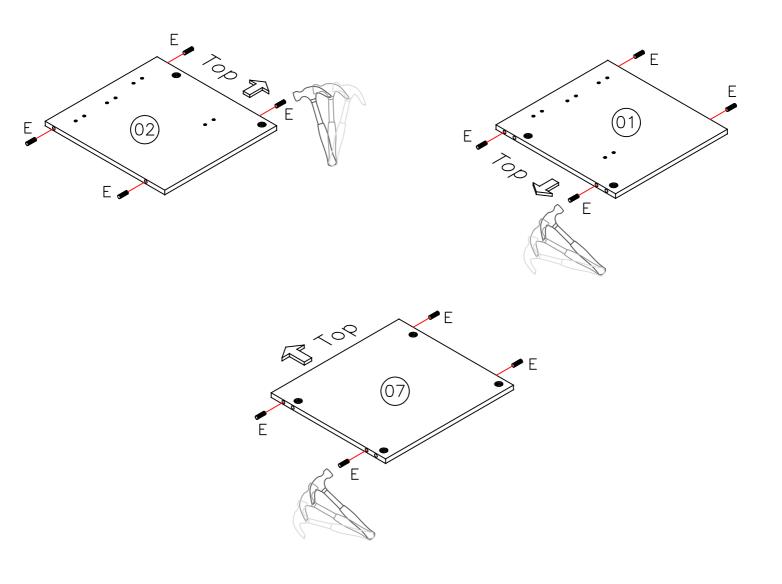


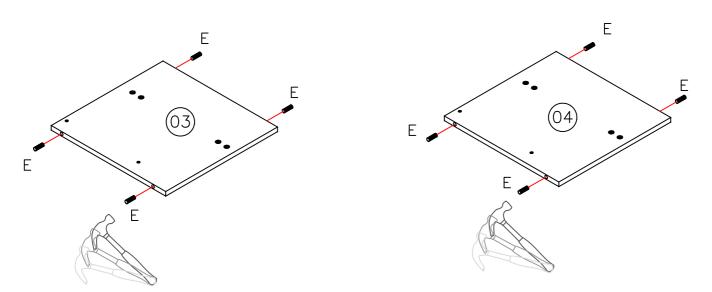





G		8
Т	•••	4
Х		4
Υ	♣	8

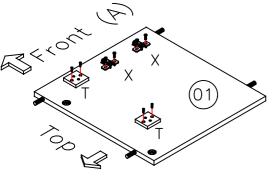


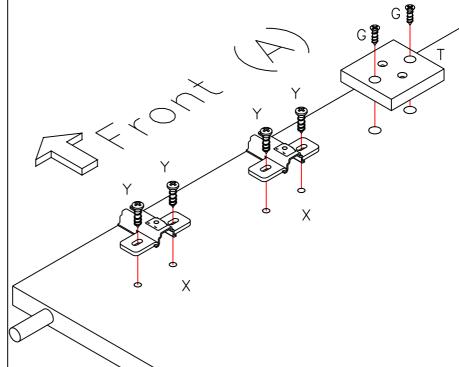


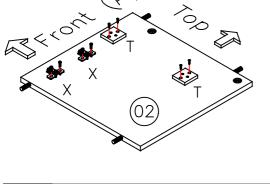



Preassembly of parts



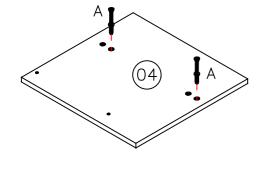


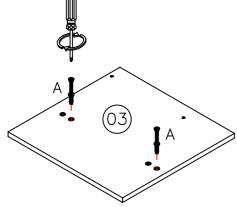

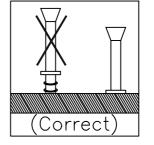



CS@K1intlgrp.com or Toll-free 1-877-250-2820

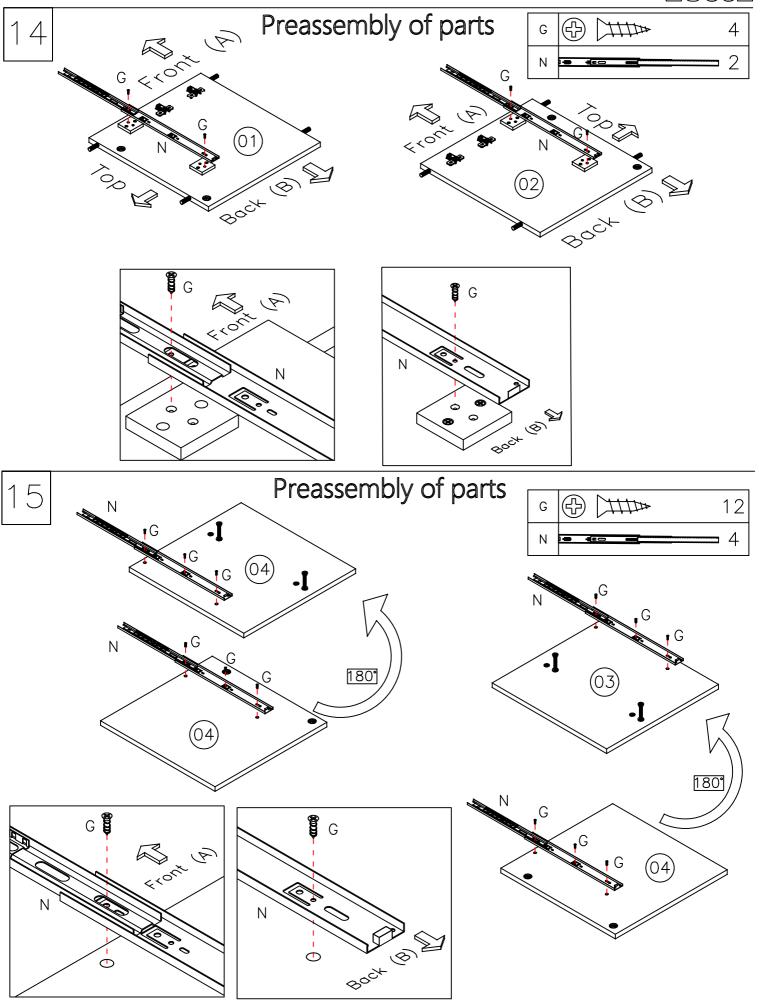



CS@K1intlgrp.com or Toll-free 1-877-250-2820





Preassembly of parts




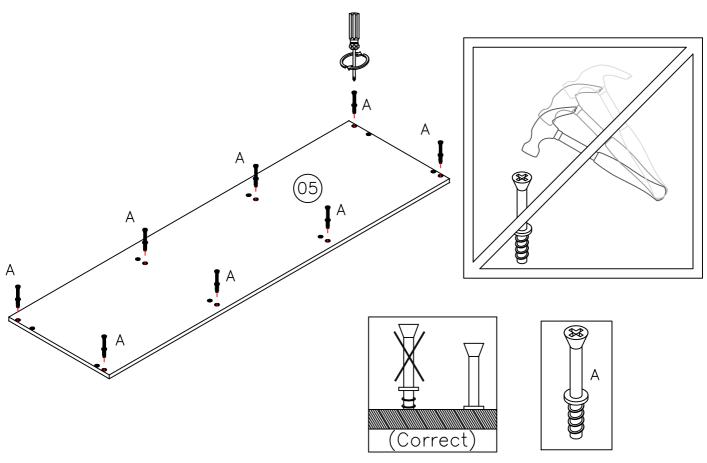


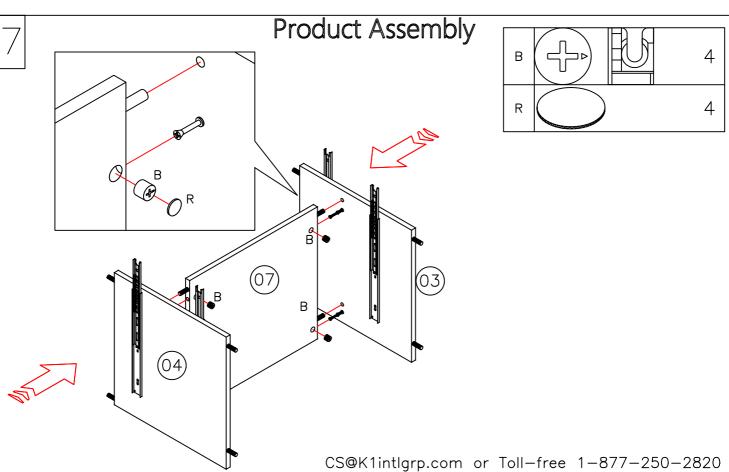


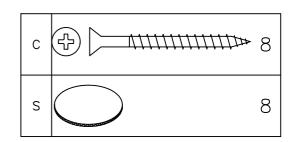


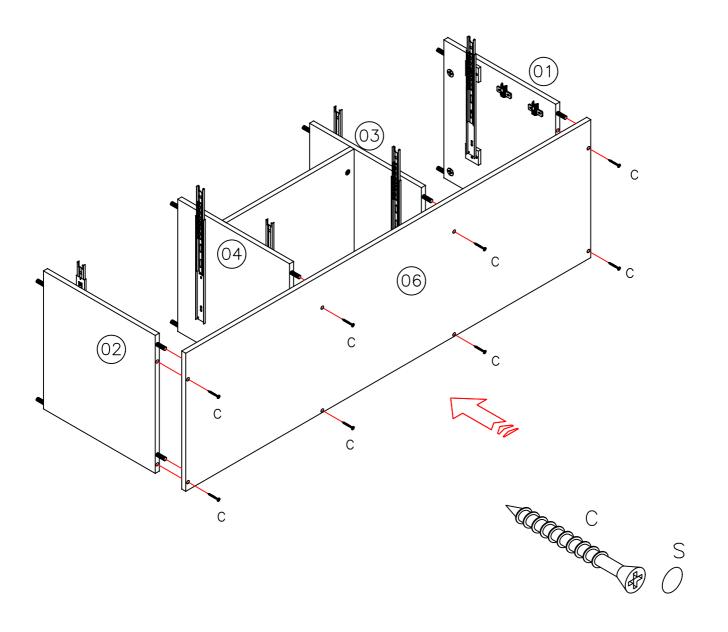

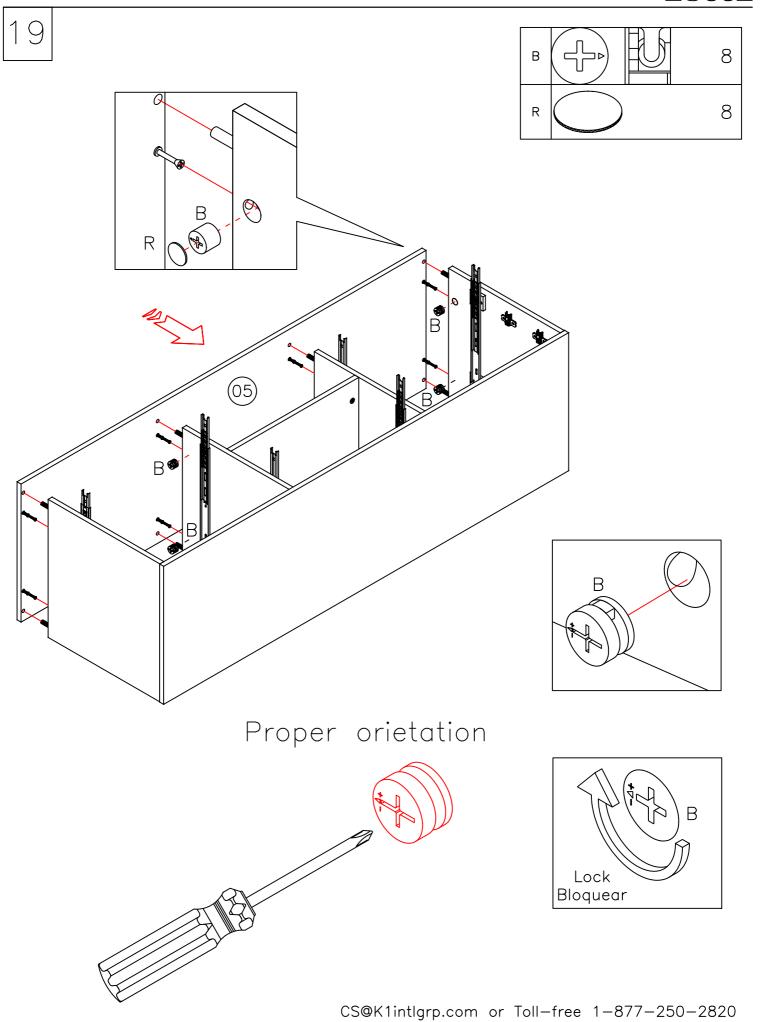

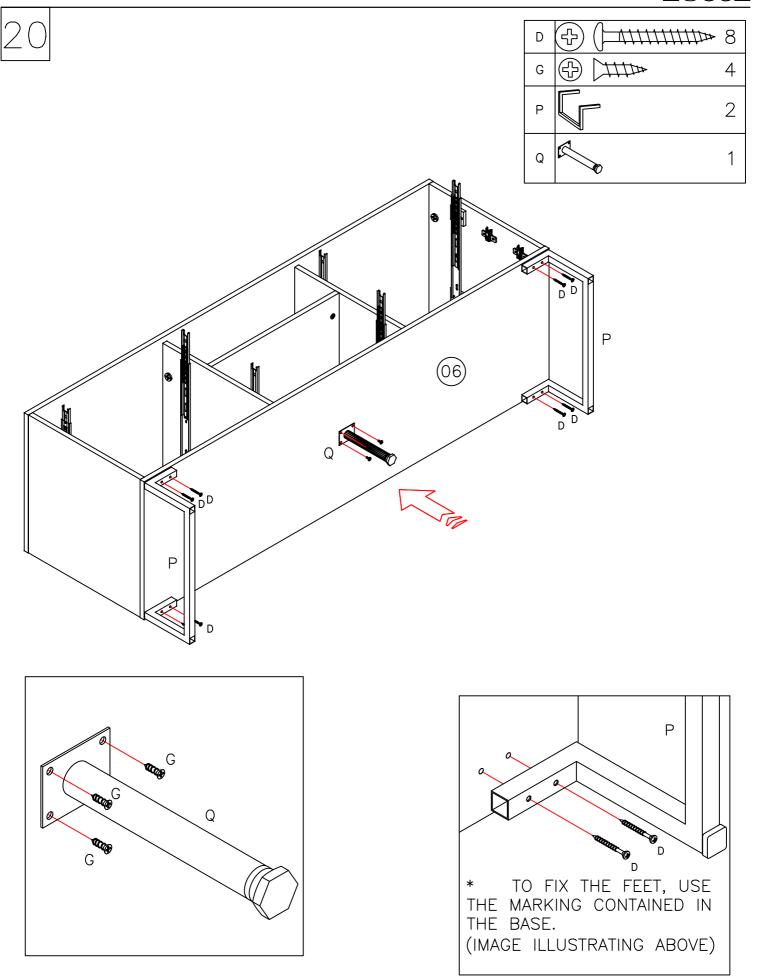

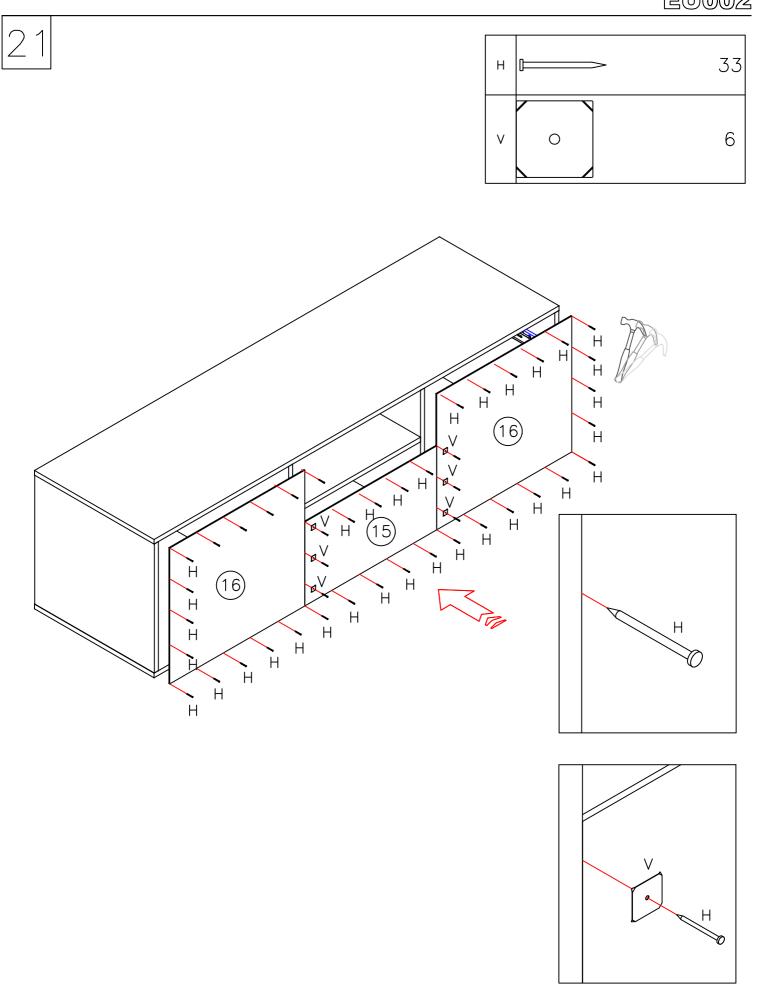


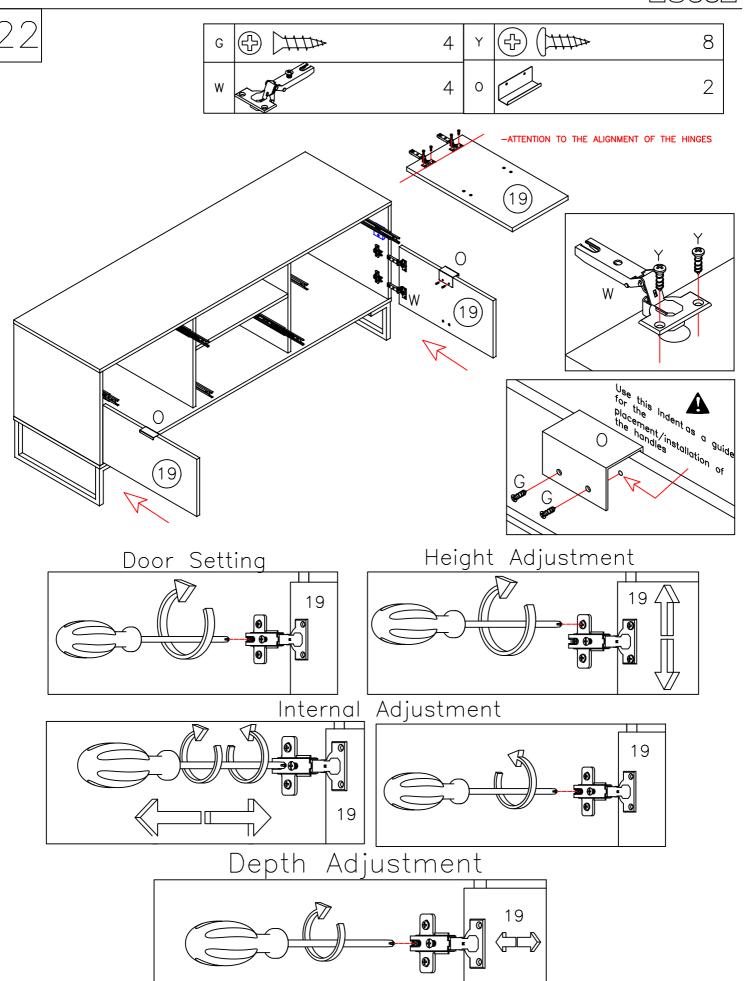


NOTE: Do not turn the DRYWALL ANCHOR into a wall stud. If you prefer to fasten the SAFETY ANTI-TIPPING to a wall stud, go to your local hardware

store for proper hardware.


Compress the wings of anchor before inserting

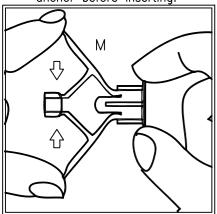

Insert the chuck into the hole of the base material.

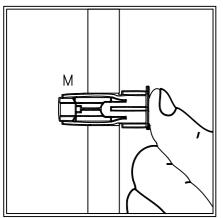


Position the object over the bushing and secure it with a screw.

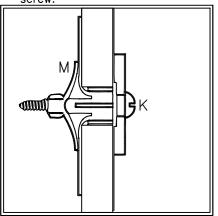

A WARNING - Anti-Tip Advisory


Anti-tipping installation 2 Mounting bracket Screw 2 Screw 3,5x16 BC 2




The minimum length of the screw must be the bushing length + object thickness

that will be fixed.

To guarantee the wing expansion function of the bushing, after the screw head is at the object to be fixed, one must continue to rotate the screw until maximum torque

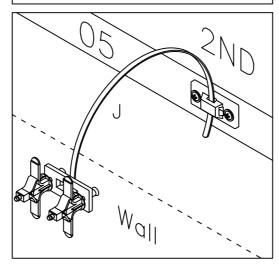

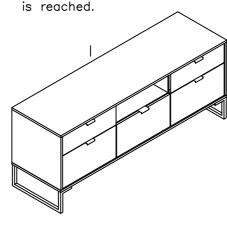

Potential of serious fatal crushing injuries may occur from furniture tip—over. To help prevent tip—over:

ALWAYS INSTALL the tip-over restrain that came with your furniture. This tip-over restrains only reduces but does NOT completely eliminate the risk of tip-over

- ALWAYS Place the heaviest items in the lowest/bottom drawer.
- NEVER place TV's or other heavy objects on top of this product.
- NEVER allow children to scale/climb/hang on the drawers, doors, or shelves. NEVER open more than one drawer at a time.
- B ADVERTENCIA Aviso antivuelco


Pueden producirse lesiones graves por aplastamiento mortales debido al vuelco de los muebles. Para ayudar a prevenir vuelcos:

- SIEMPRE INSTALE el sistema de retención que viene con sus muebles. Este sistema antivuelco solo reduce pero NO elimina por completo el riesgo de vuelco.
 - SIEMPRE coloque los artículos más pesados en el cajón más bajo /inferior.
 - NUNCA coloque televisores u otros objetos pesados encima de este producto. NUNCA permita que los niños escalen, trepen o se cuelguen de los cajones, puertas o estantes.
 - NUNCA abra más de un cajón a la vez



Drawer installation


Insert the slide into the profile and close the drawer to finish locking the clip.

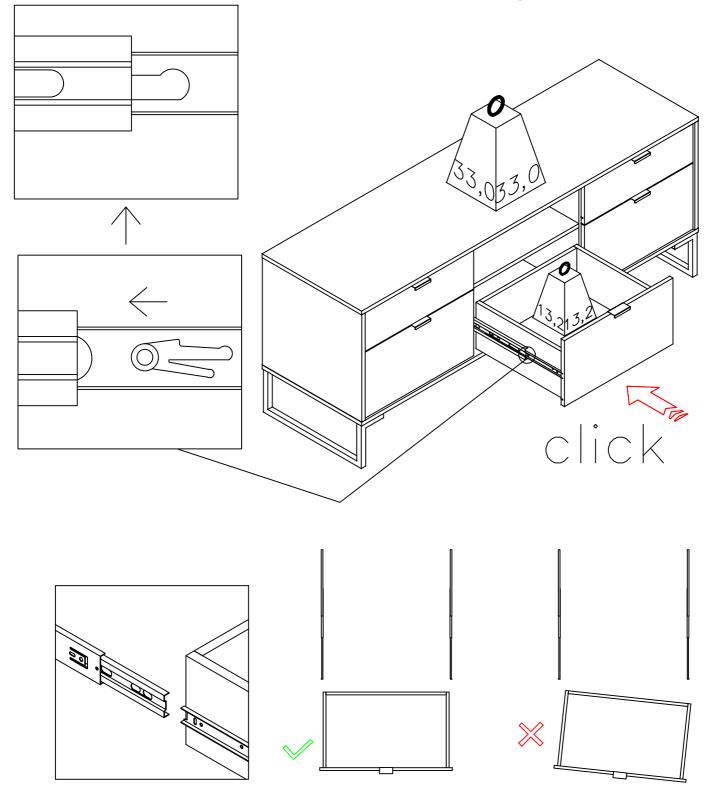



Drawer Removal

Open the drawer completely. Unlock the side clips, then pull out the drawer.

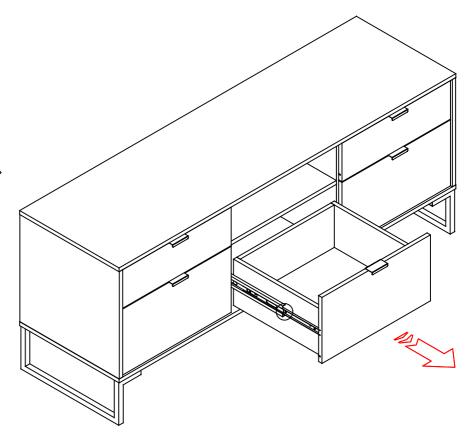

Observe the position of the side clips for disassembling the slide

