

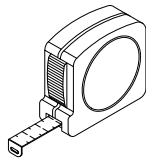



ASSEMBLY INSTRUCTIONS


01/22
EU030




Warning –
CHOKING HAZARD – Small Parts Not for children under 3 years. Adult assembly required.









1.30mins

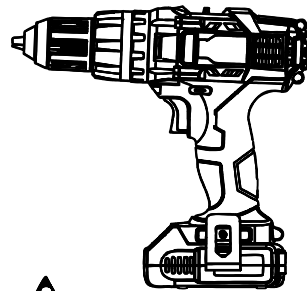

Although not required, it is recommended that a drill be used to help ease the assembly process, as some holes are not pre-drilled.


















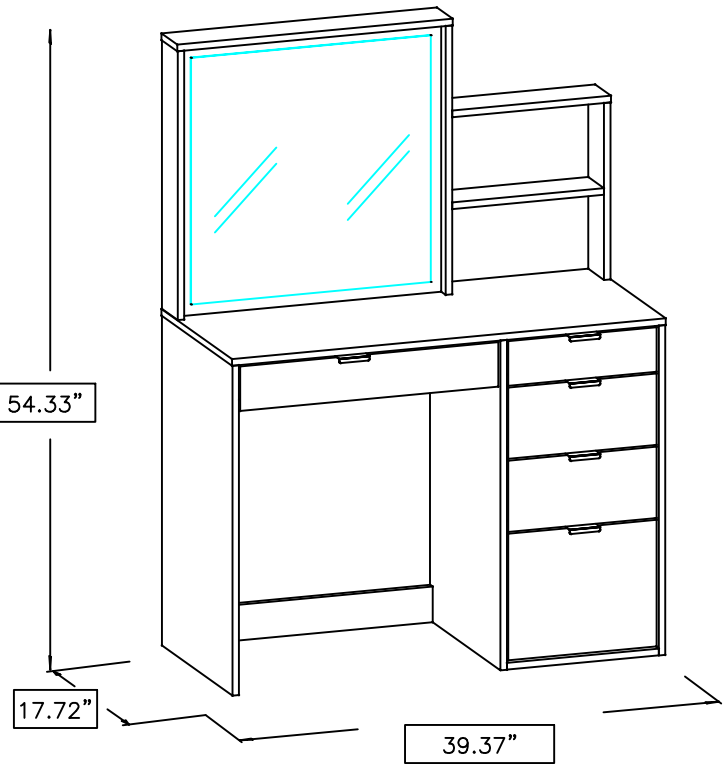


Part Identification

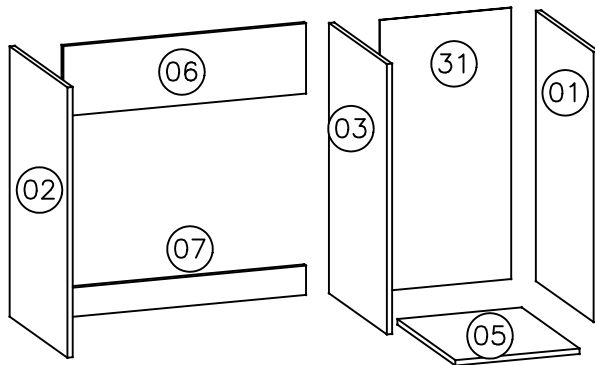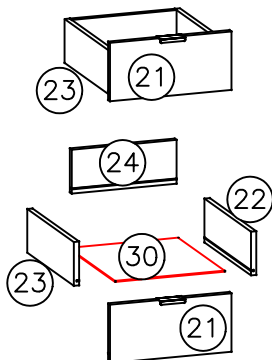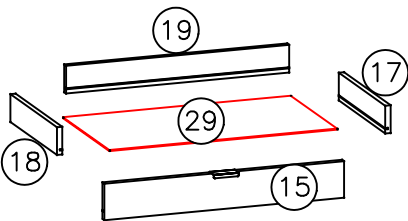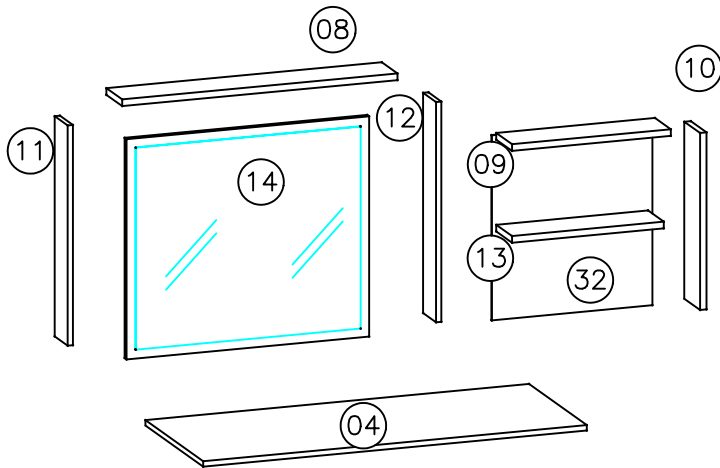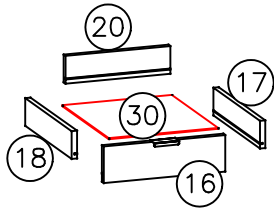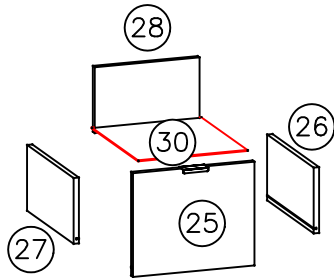


List of pieces





Code	Description	Amount	Length (in.)	Width (in.)	Thickness (in.)	Box
01	Right side	1	29.13"	17.60"	.59"	A
02	Left side	1	29.13"	17.60"	.59"	A
03	Division	1	29.13"	17.60"	.59"	A
04	Top bottom panel	1	39.37"	17.60"	.59"	A
05	Base	1	13.78"	17.60"	.59"	A
06	Strengthening	1	23.74"	7.56"	.59"	A
07	Back baseboard	1	23.74"	3.15"	.59"	A
08	Larger top panel	1	25.00"	3.94"	.59"	A
09	Smaller top panel	1	14.41"	3.94"	.59"	A
10	Upper right side	1	15.63"	3.94"	.59"	A
11	Top left side	1	23.74"	3.94"	.59"	A
12	Upper partition	1	23.74"	3.94"	.59"	A
13	Shelf	1	13.78"	3.94"	.59"	A
14	Mirror part	1	23.74"	23.74"	.59"	A
15	Wide drawer front	1	23.43"	3.94"	.59"	A
16	Smaller front of the drawer	1	13.46"	3.94"	.59"	A
17	Right drawer side	2	14.17"	2.99"	.59"	A
18	Left drawer side	2	14.17"	2.99"	.59"	A
19	Wide bedside drawer	1	21.57"	2.99"	.59"	A
20	Small bedside drawer	1	11.61"	2.99"	.59"	A
21	Medium drawer front	2	13.46"	6.30"	.59"	A
22	Right side of the middle drawer	2	14.17"	4.72"	.59"	A
23	Left side of the middle drawer	2	14.17"	4.72"	.59"	A
24	Medium drawer headboard	2	11.61"	4.72"	.59"	A
25	Largest drawer front	1	13.46"	11.18"	.59"	A
26	Rigth larger drawer side	1	14.17"	7.09"	.59"	A
27	Left larger drawer side	1	14.17"	7.09"	.59"	A
28	Largest drawer front	1	11.61"	7.09"	.59"	A
29	Larger drawer bottom	1	22.09"	14.09"	.12"	A
30	Smaller drawer bottom	4	12.13"	14.09"	.12"	A
31	Lower bottom part	1	29.25"	14.57"	.12"	A
32	Top part of the bottom	1	16.34"	14.57"	.12"	A

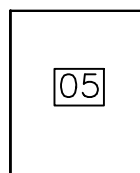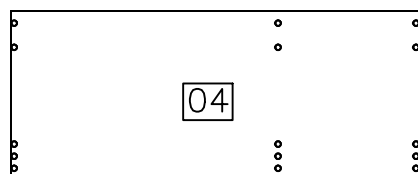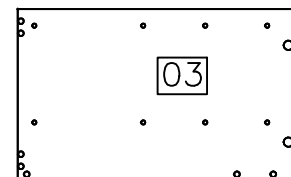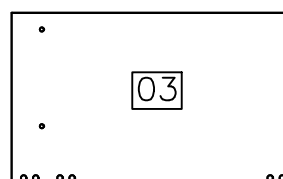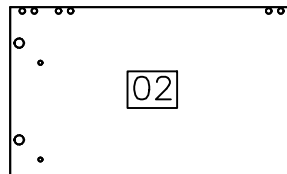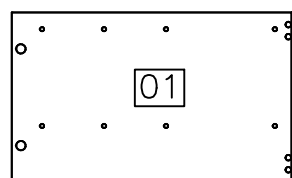


2x




2x

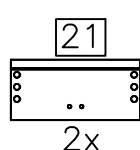


2x

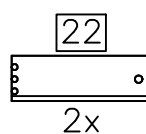






2x

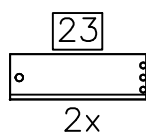






2x



2x






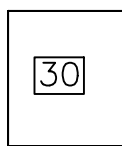
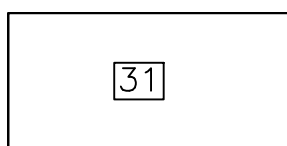
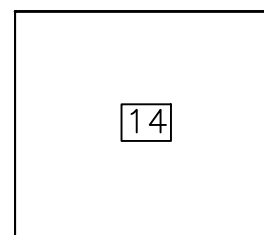

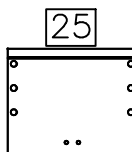


4x

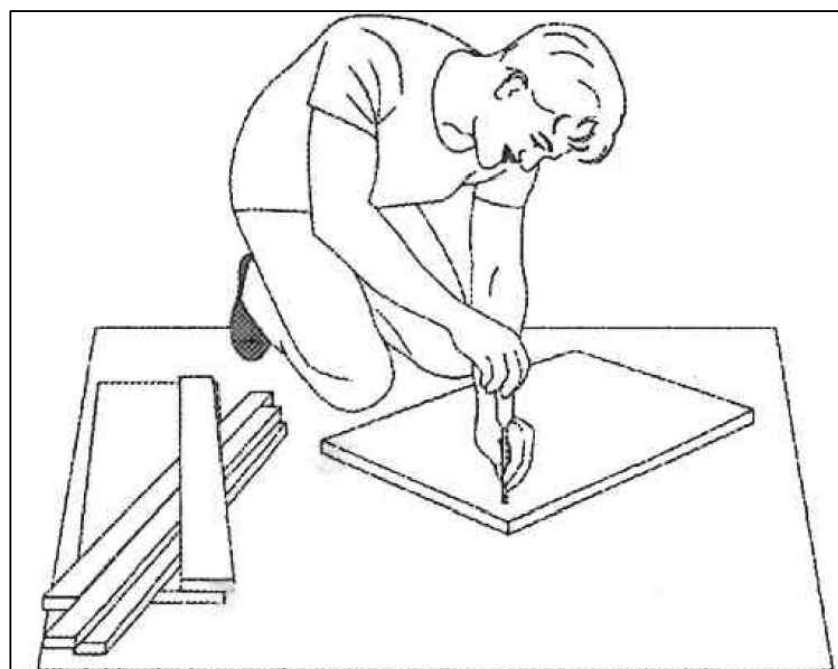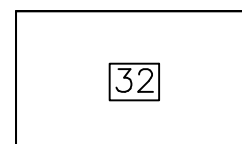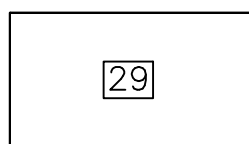








It is recommended the use of the box in which your furniture arrived in, be opened, and laid out on the floor as your work area. This helps prevent an unnecessary damages from occurring.

Hardware

	Code	Description	Amou.
A	30945	 Cam Screws	16
B	30950	 Cam Locks	16
C	226	 Screw 4x40	33
D	5256	 Screw 4x20	12
E	4214	 Screw 3,5x14	48
F	1925	 Dowel 6x50mm	3
G	1802	 Dowel 6x30mm	54
H	108	 Nail 12x12	6
I	107	 Nail 10x10	38
Anti-tipping installation			
J	55606	 Mounting bracket	2
K	55607	 Clamp	1
L	51980	 Screw 4,5x50	2
M	1178	 Screw 3,5x16 BC	2
N	32069	 Adapter sleeve	2


T
O
S
C
A
L
E

NOT TO SCALE

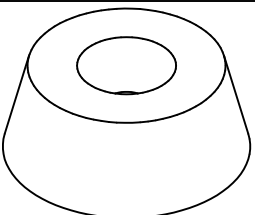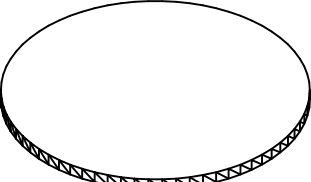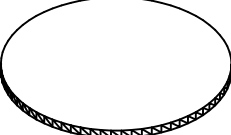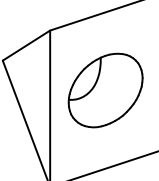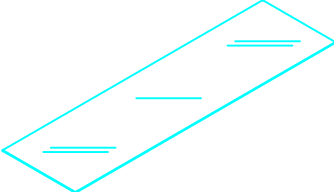
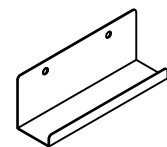
O	1901		Shoe black	6
P	169		Metal slide 350mm	5
Q	OW=53287 (Off White) BR=45292 (Branco Liso)		Tap hole 19mm	16
R	OW=53286 (Off White) BR=8010 (Branco Liso)		Tap hole 13mm	27
S	18458		Black triangular support	12
T	55661		Mirror 553x553x3mm	1
U	1423		Shore Fixer	4
V	OW=54043 (Off White) BR=40726 (Branco Fosco)		Handle 70mm	5
01 Saco médio para acessórios (Internal production data)				
01 Saco médio para puxadores (Internal production data)				

1A


Drawer Preassembly



This process is repeated twice

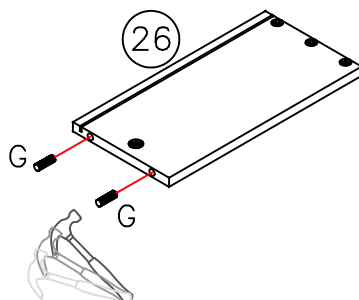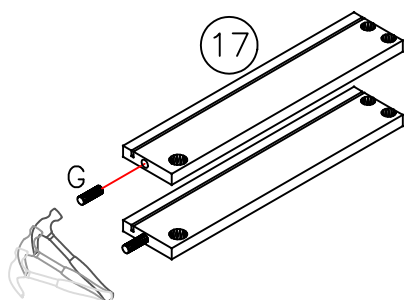


This process is repeated twice


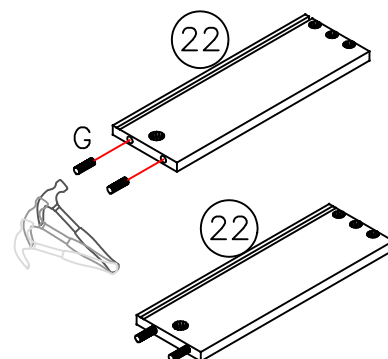


1B


Drawer Preassembly



This process is repeated twice

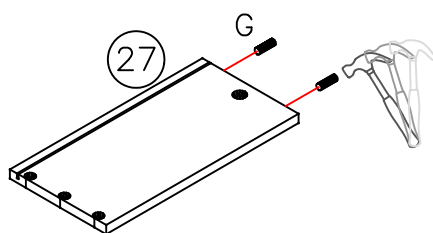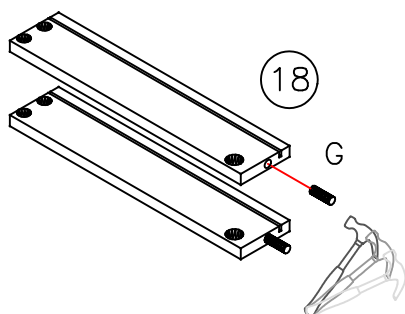


This process is repeated twice



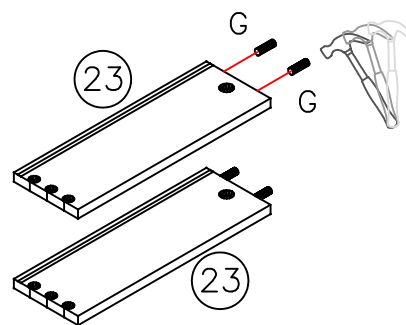


1C

Drawer Preassembly






This process is repeated twice

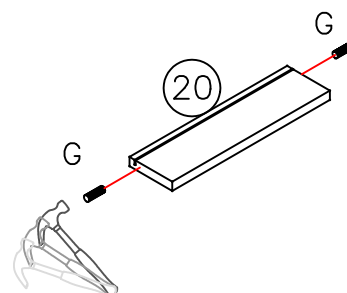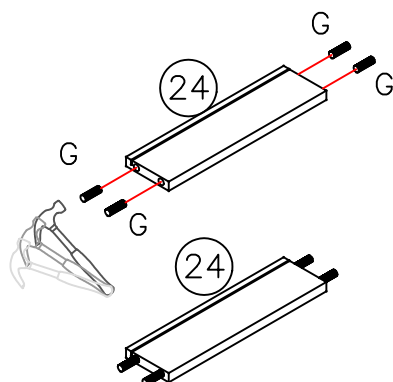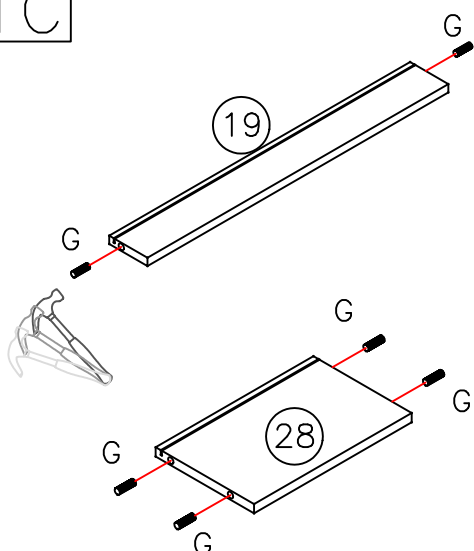




2

Drawer Preassembly

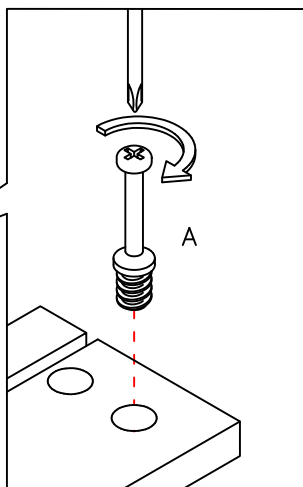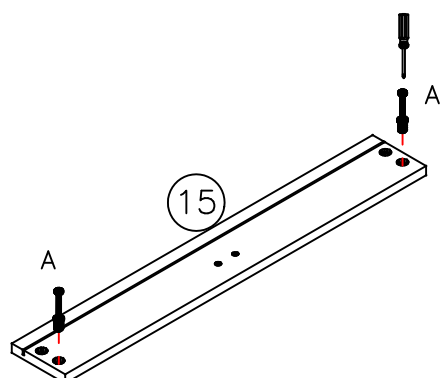

3





Drawer Preassembly

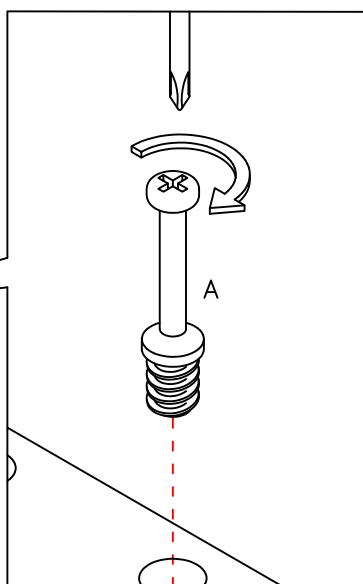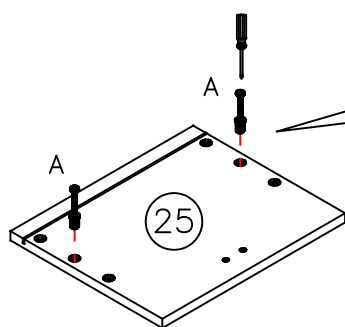

4


Drawer Preassembly


This process is repeated twice

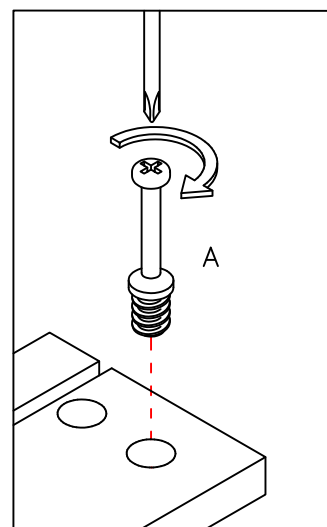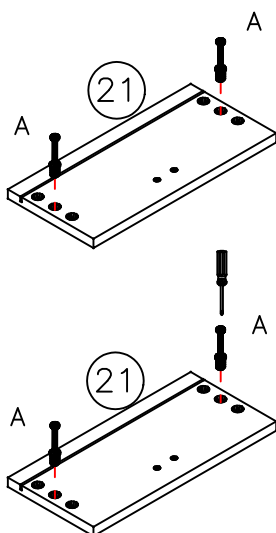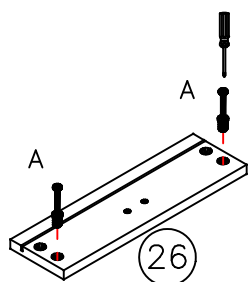

5

Drawers Mounting

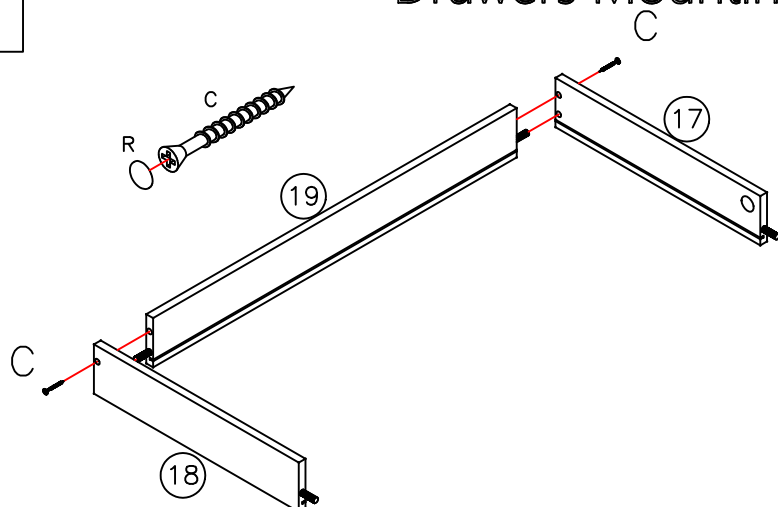



C		2
R		2


6

Drawers Mounting

This process is repeated twice

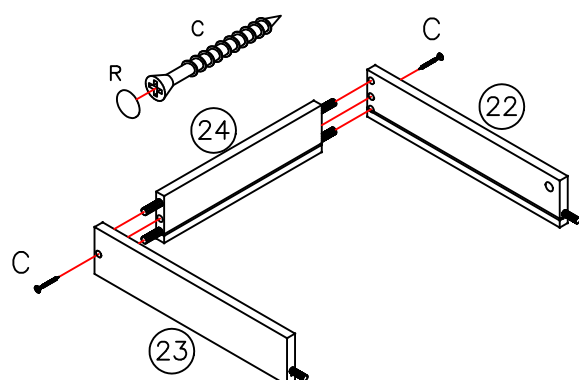



C		4
R		4

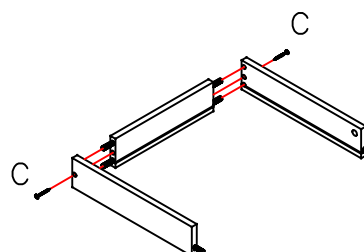


7

Drawers Mounting


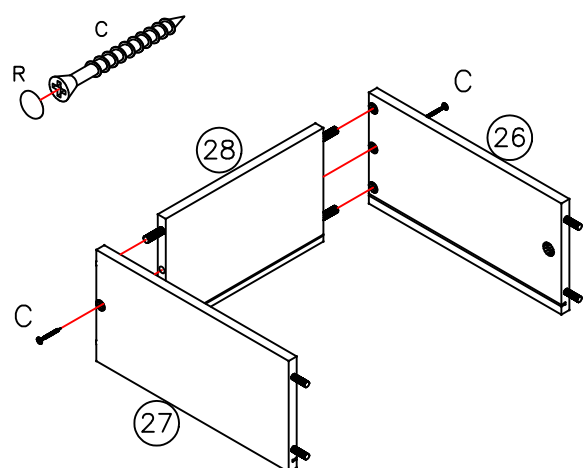


C		4
R		4

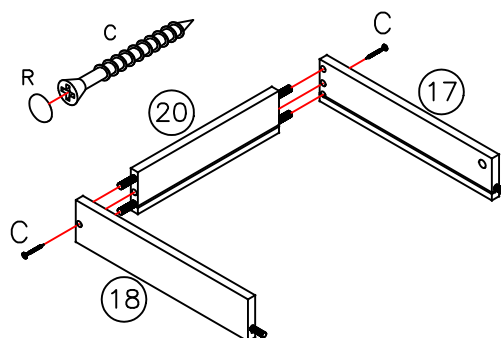


8

Drawer Assembly

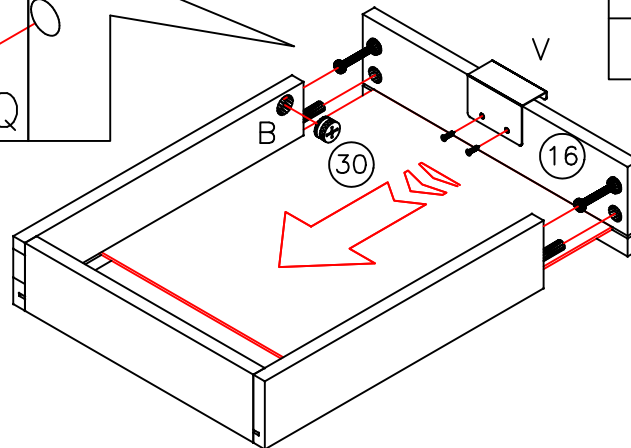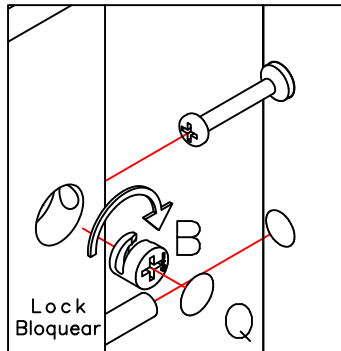



B		2
Q		2
V		1
E		2

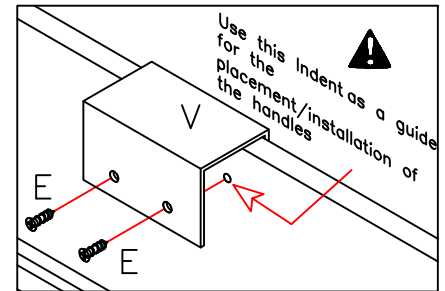


9

Drawer Assembly

This process is repeated twice

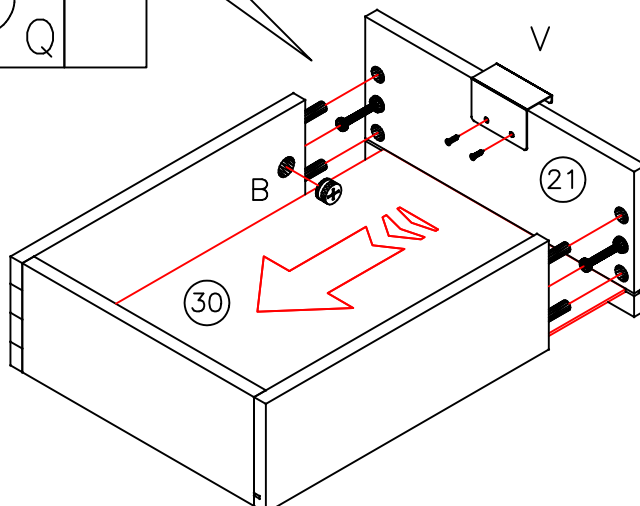
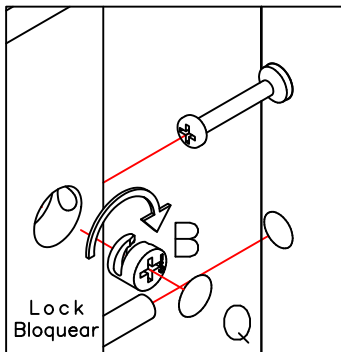


B		4
Q		4
V		2
E		4

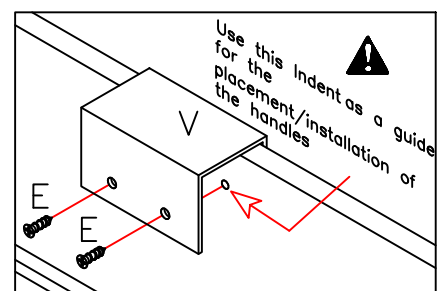


10

Drawer Assembly

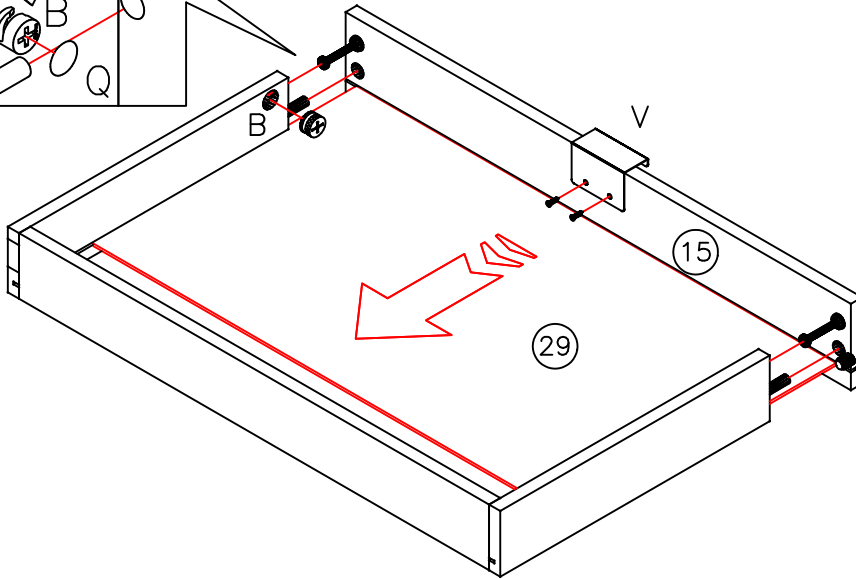
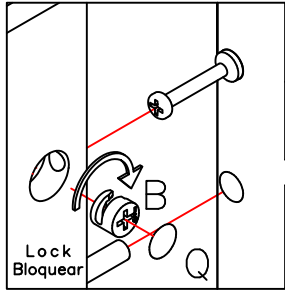


B			2
Q			2
V			1
E			2

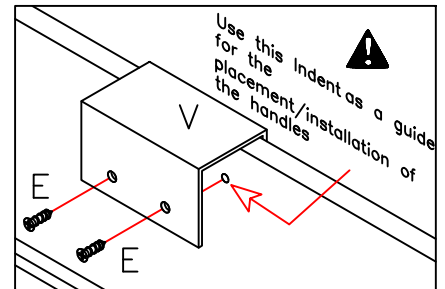


11



Drawer Assembly

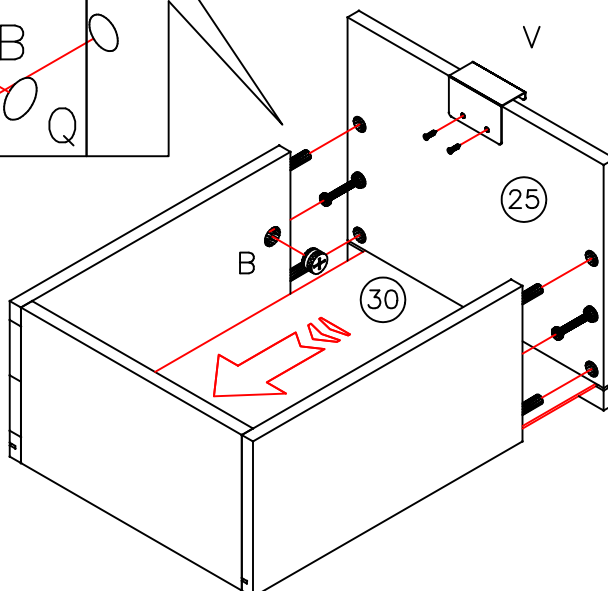
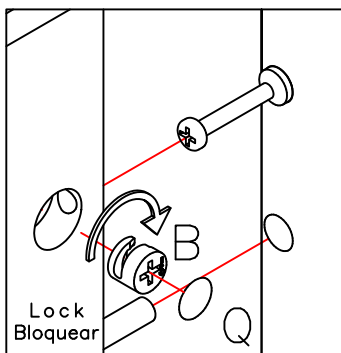


B			2
Q			2
V			1
E			2


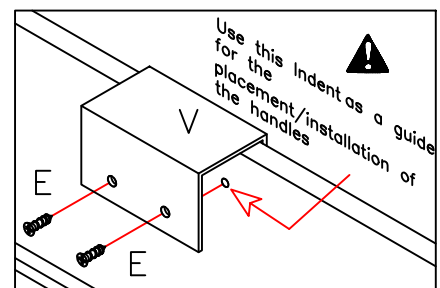


12

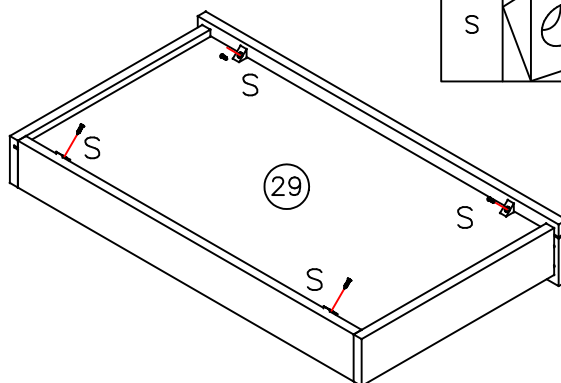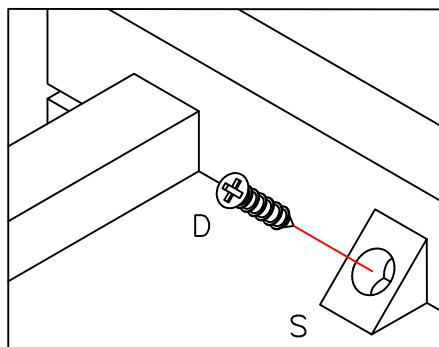







D		4
S		4

13

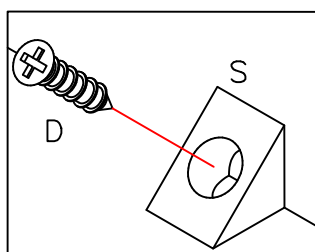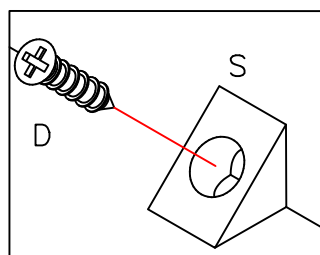

This process is repeated twice


D		8
S		8

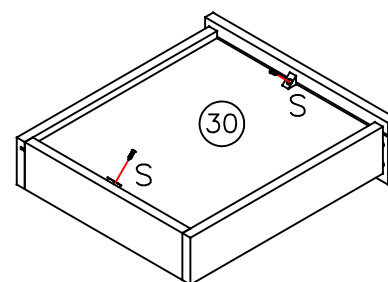
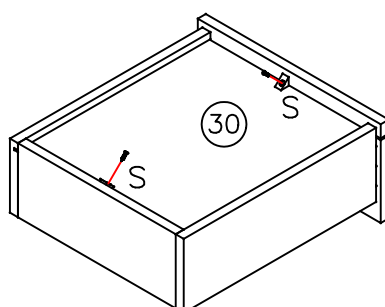
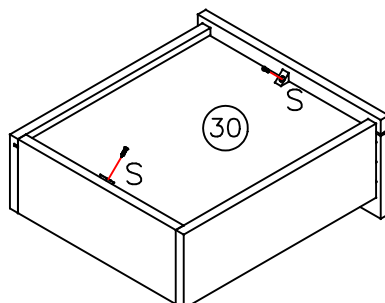
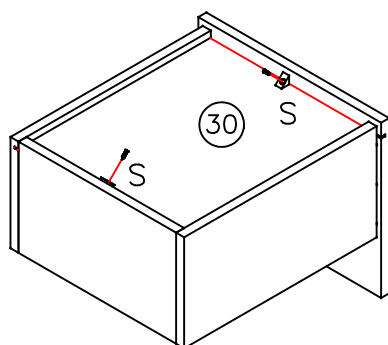
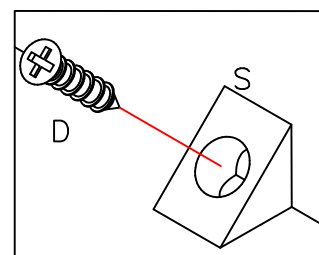


14



Drawer final assembly

This process is repeated five times

P		10
E		20

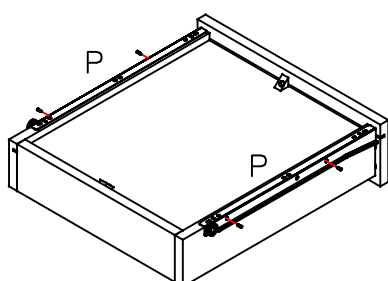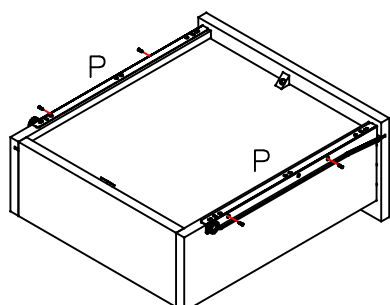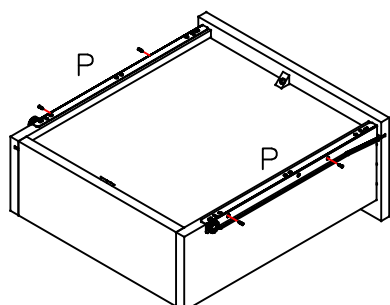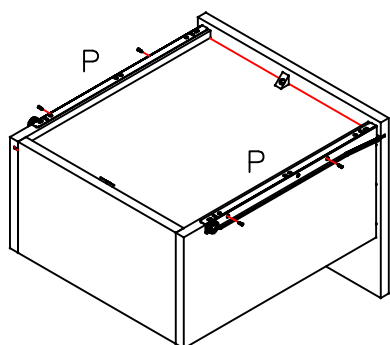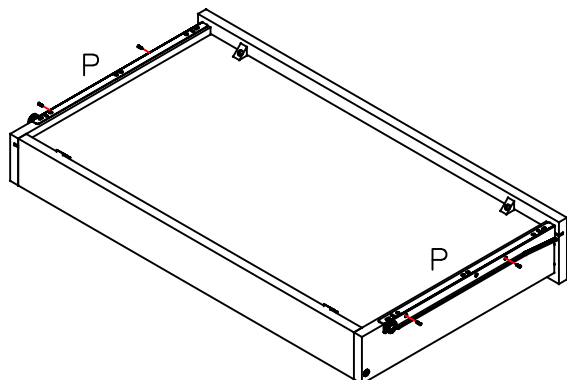

The underside of the drawer

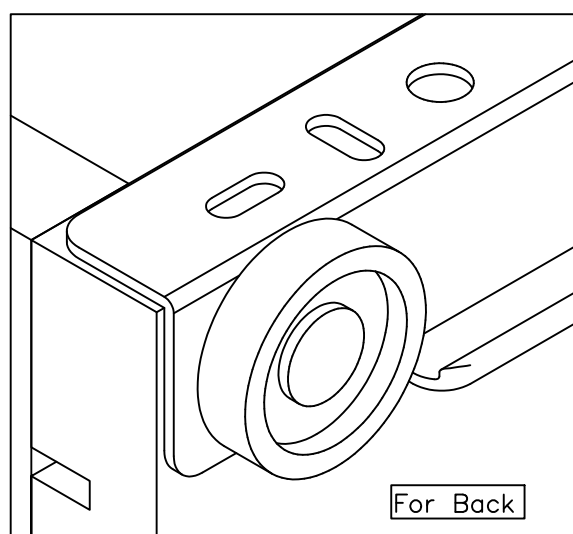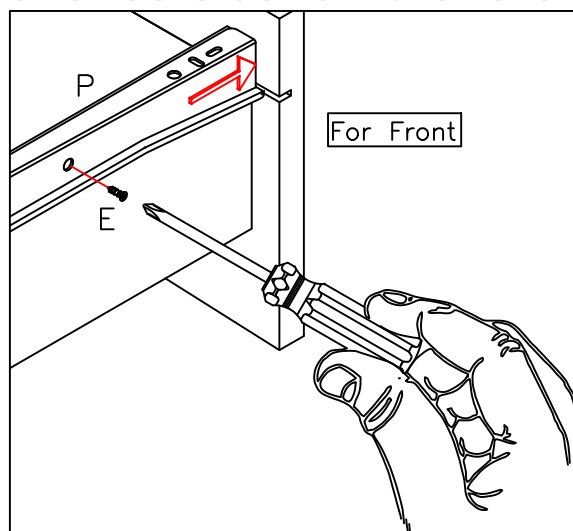



Please ensure that these screws are complete screwed in. As failure to do so could cause issues when installing the drawer












If you have any further questions regarding the assembly of the drawer, access the website through the QR CODE







15

Preassembly of parts







F		3
G		22

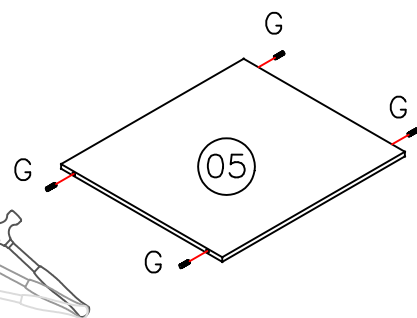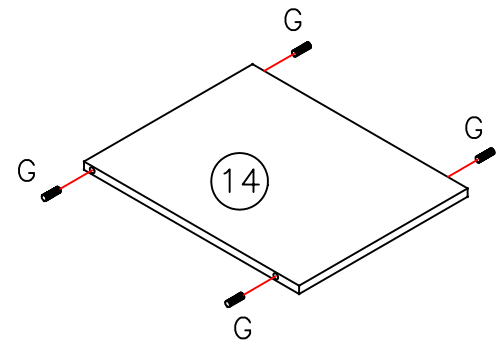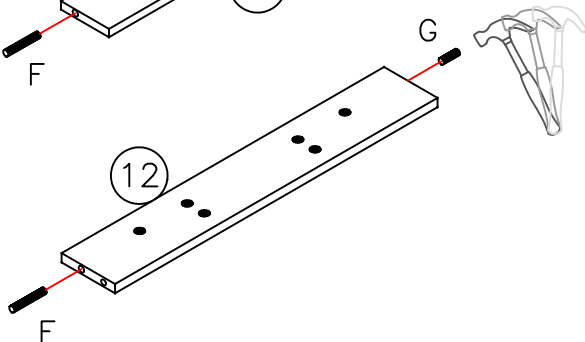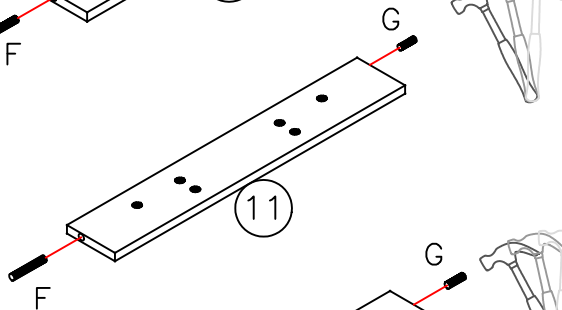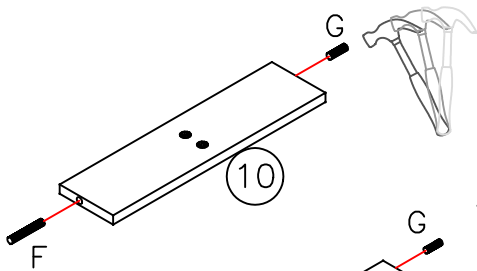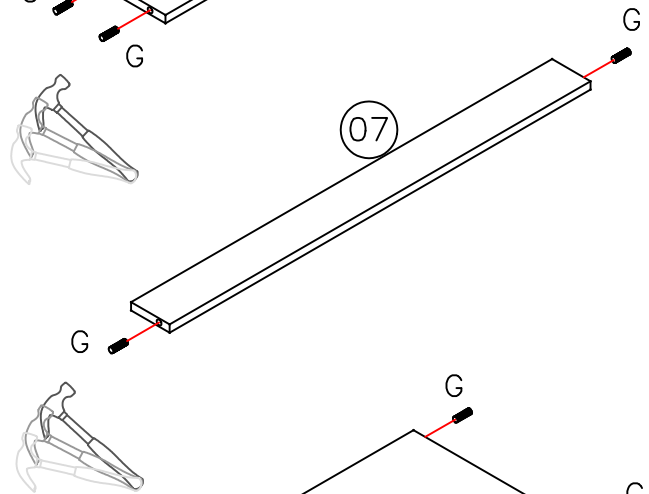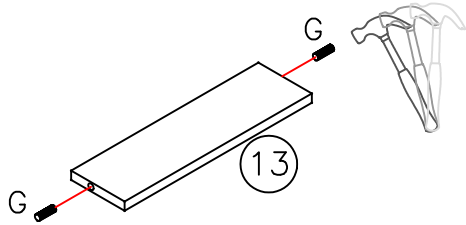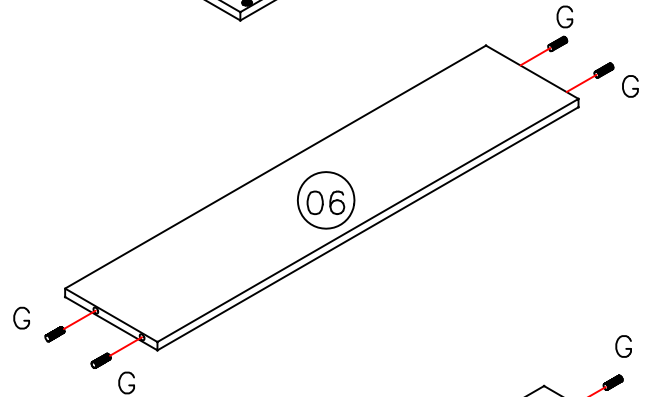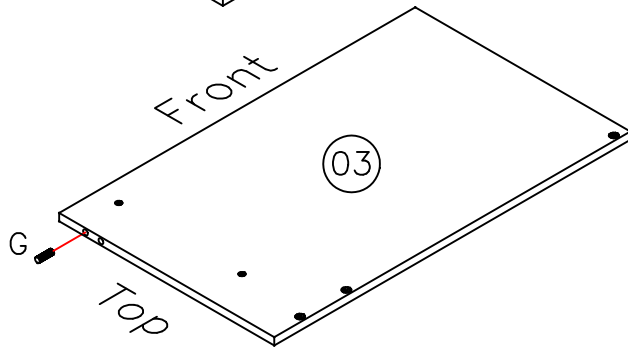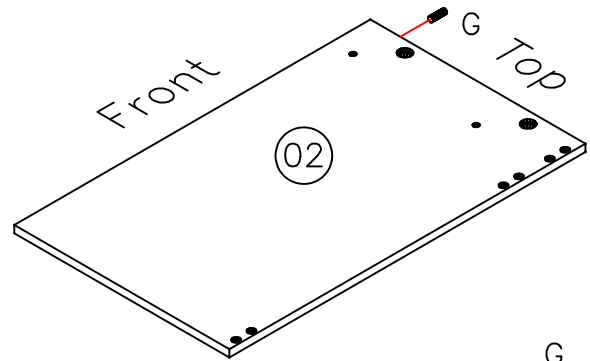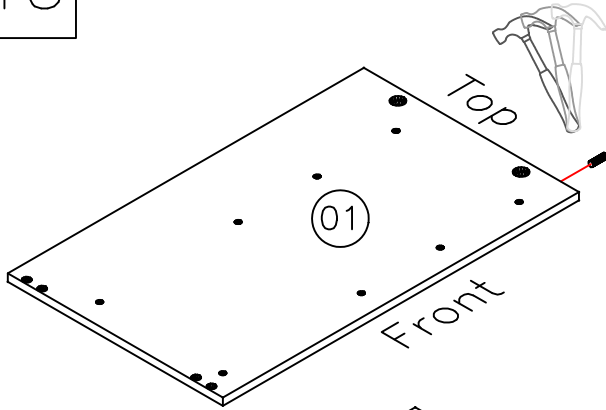


16

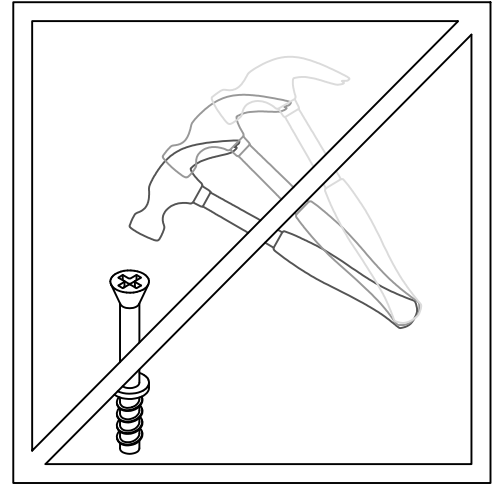

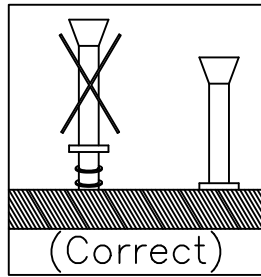
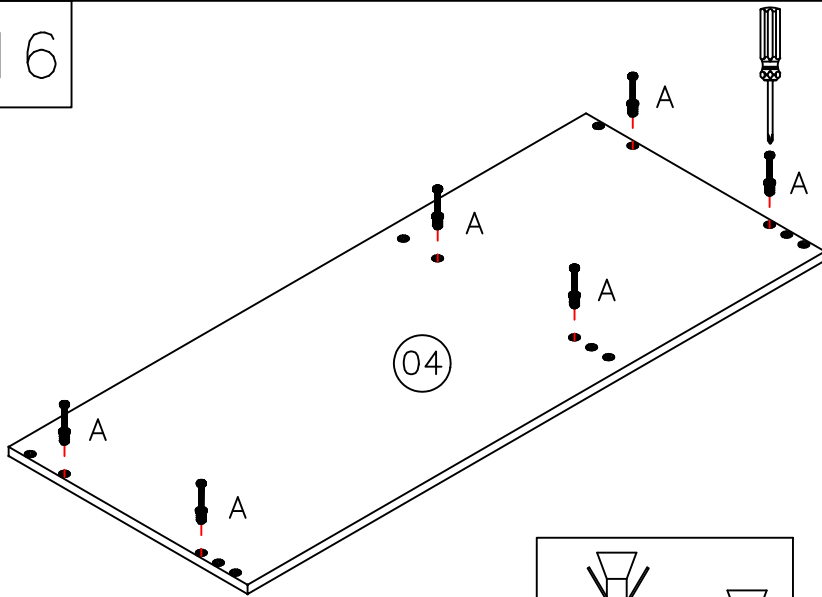


17

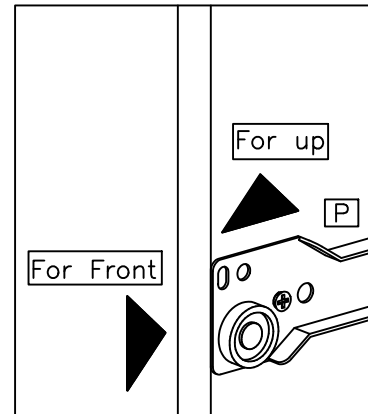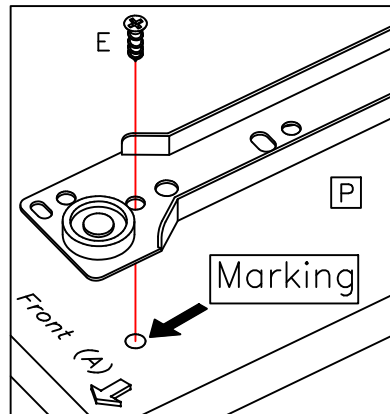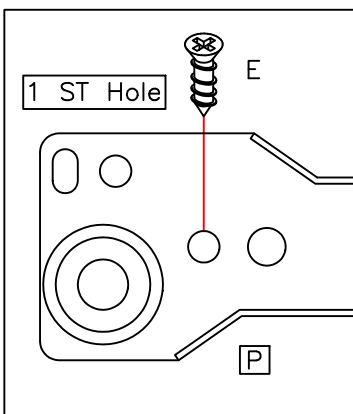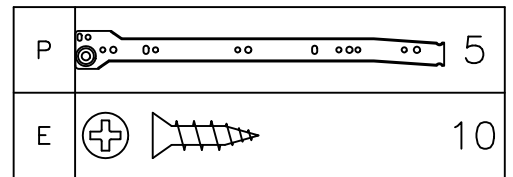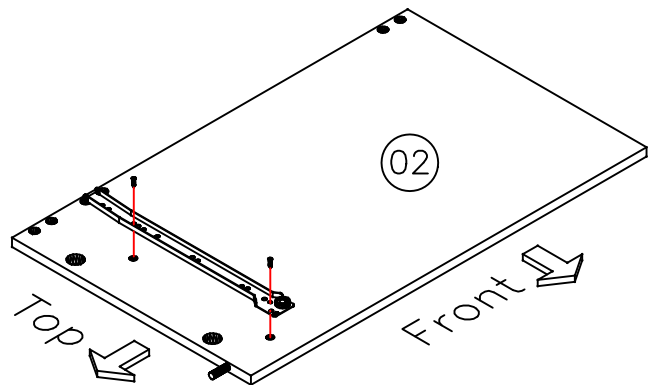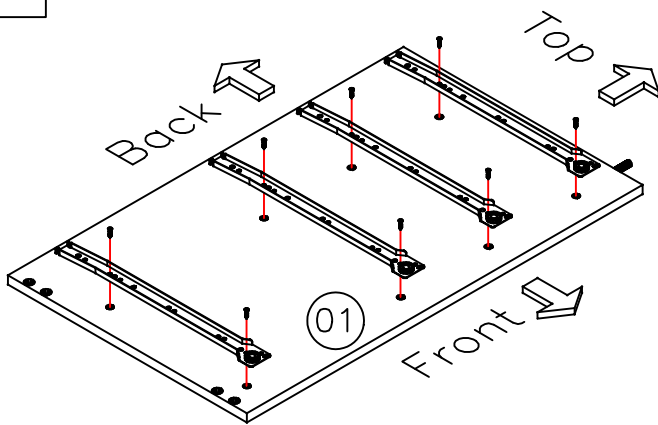


18

P		5
E		10

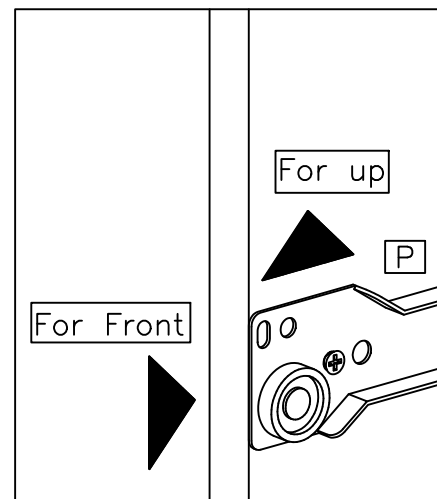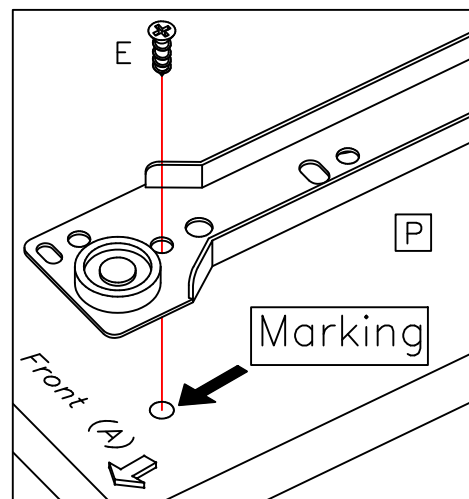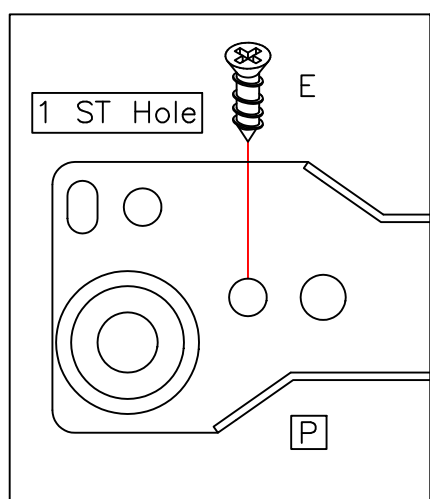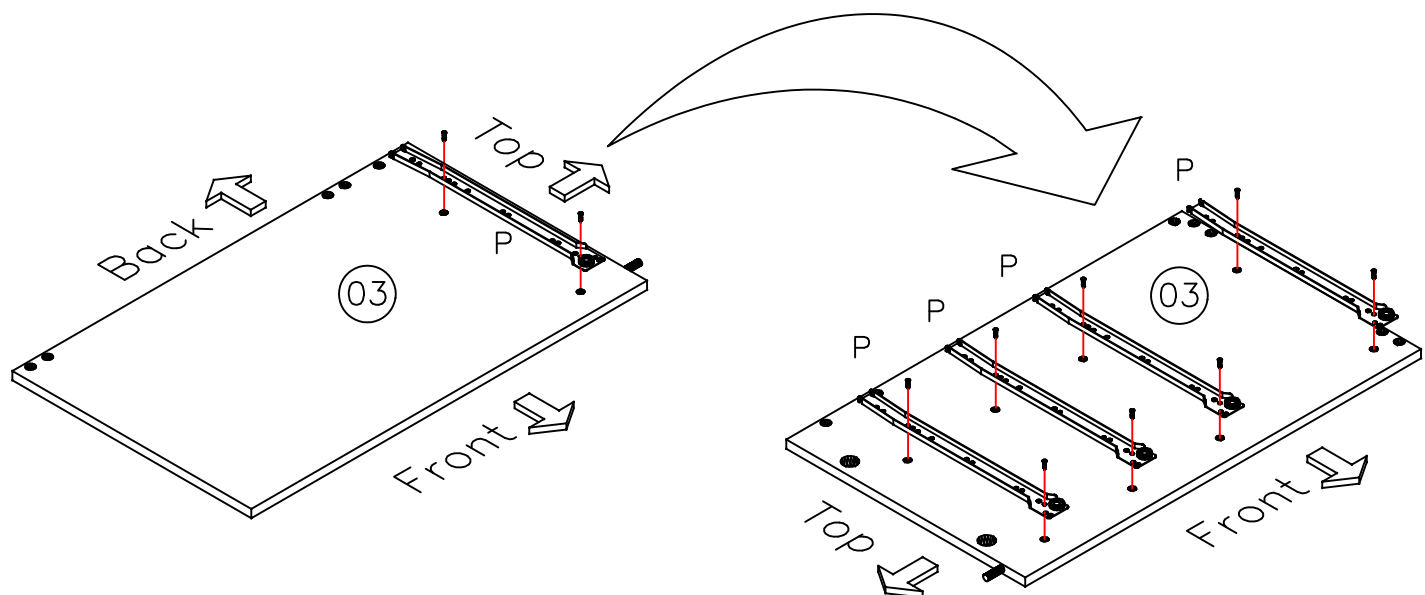


19

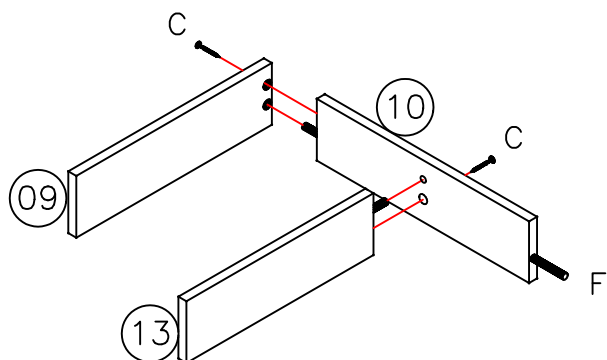


C		2
R		2

20

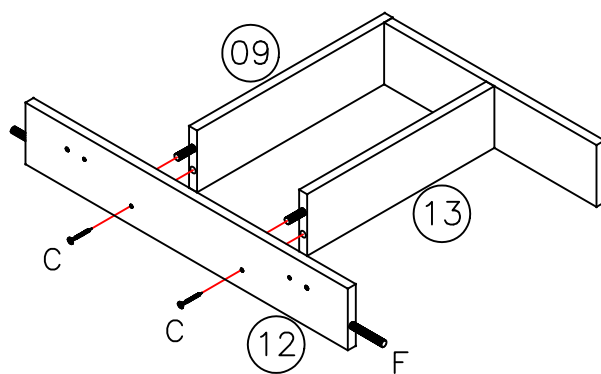


C		2
R		2


21

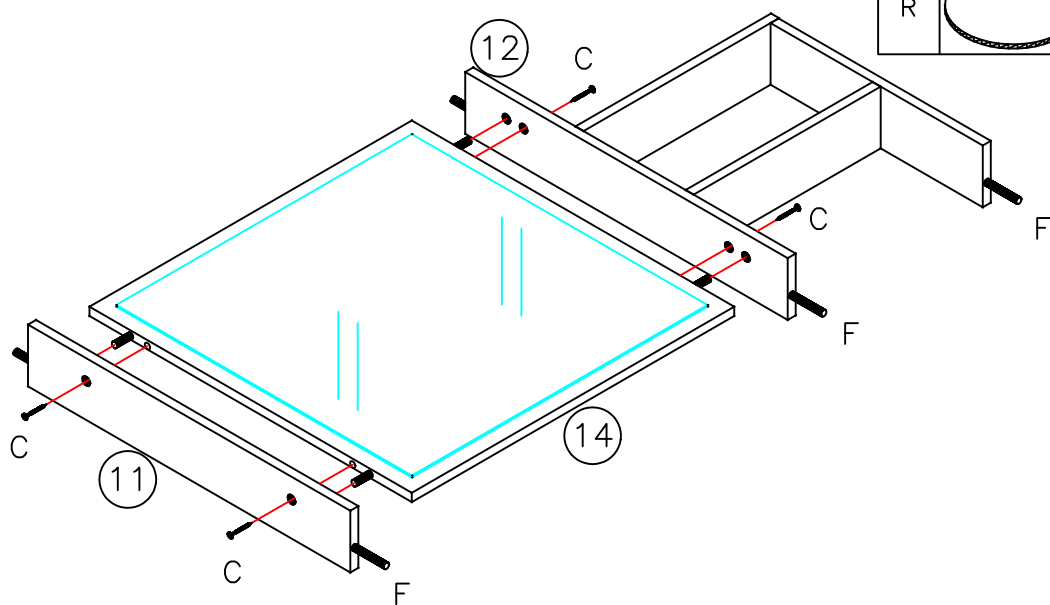


C		4
R		4


22

C			2
R			2


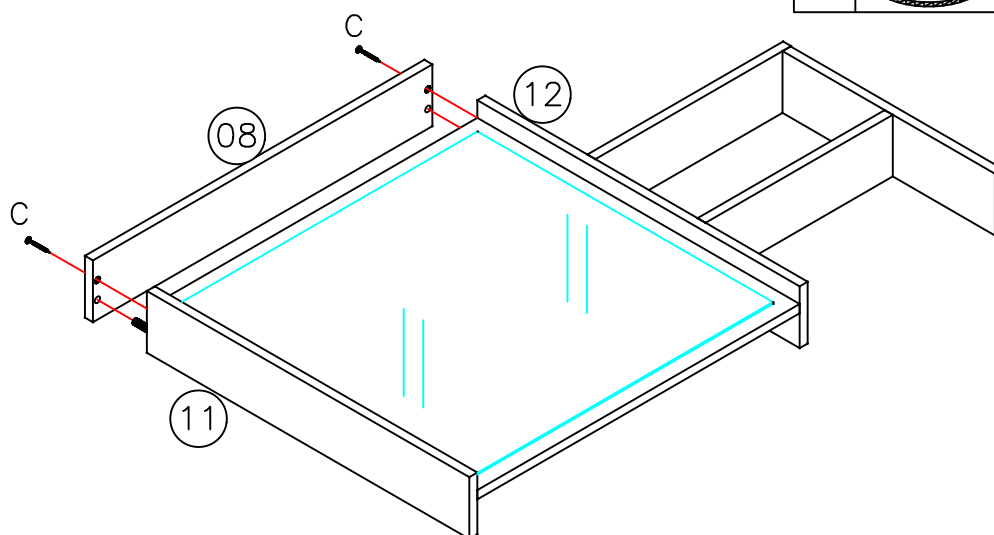


23



C			6
R			6

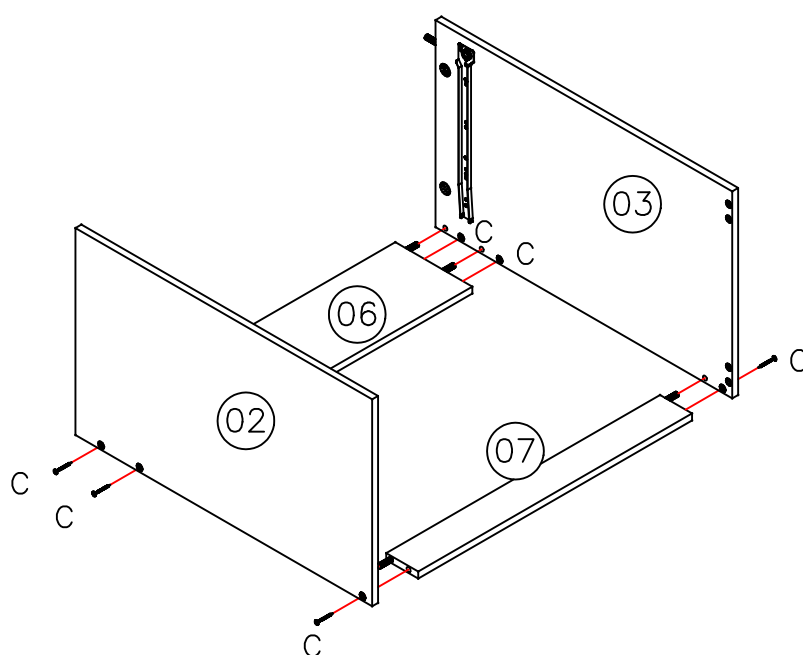



24




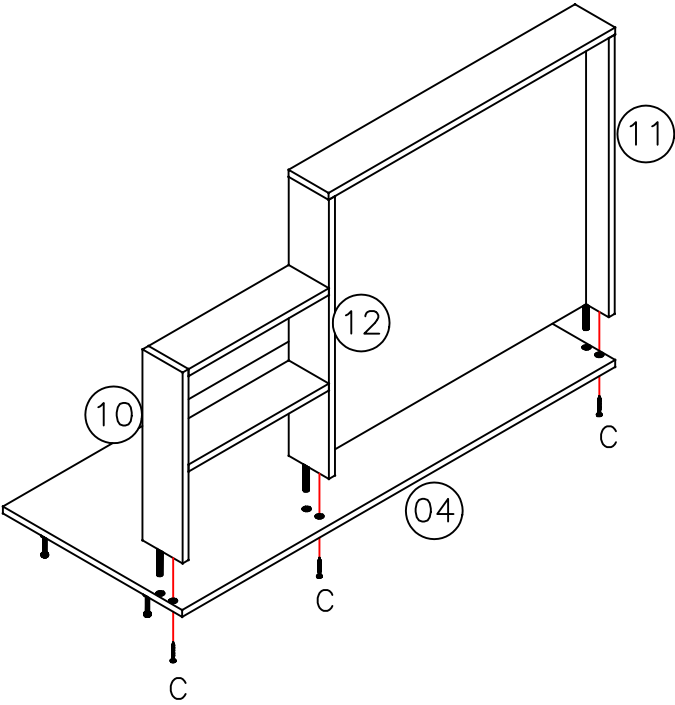



25

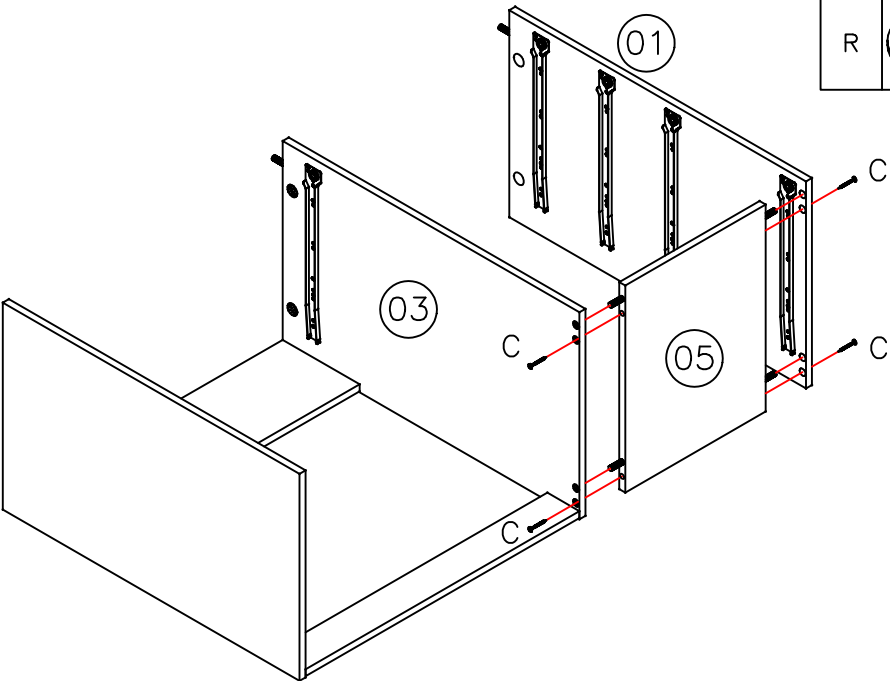
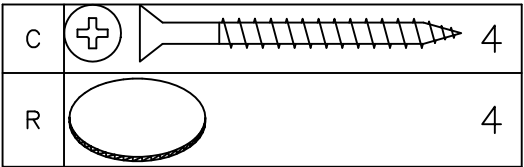





26

B			6
Q			6
H			6
O			6

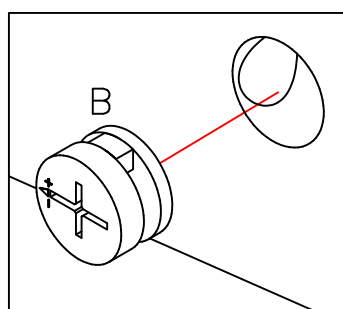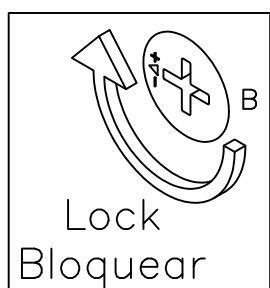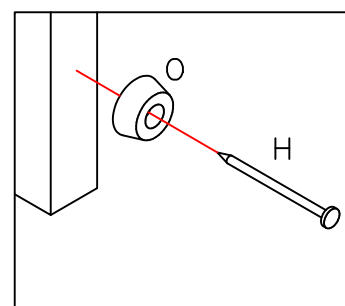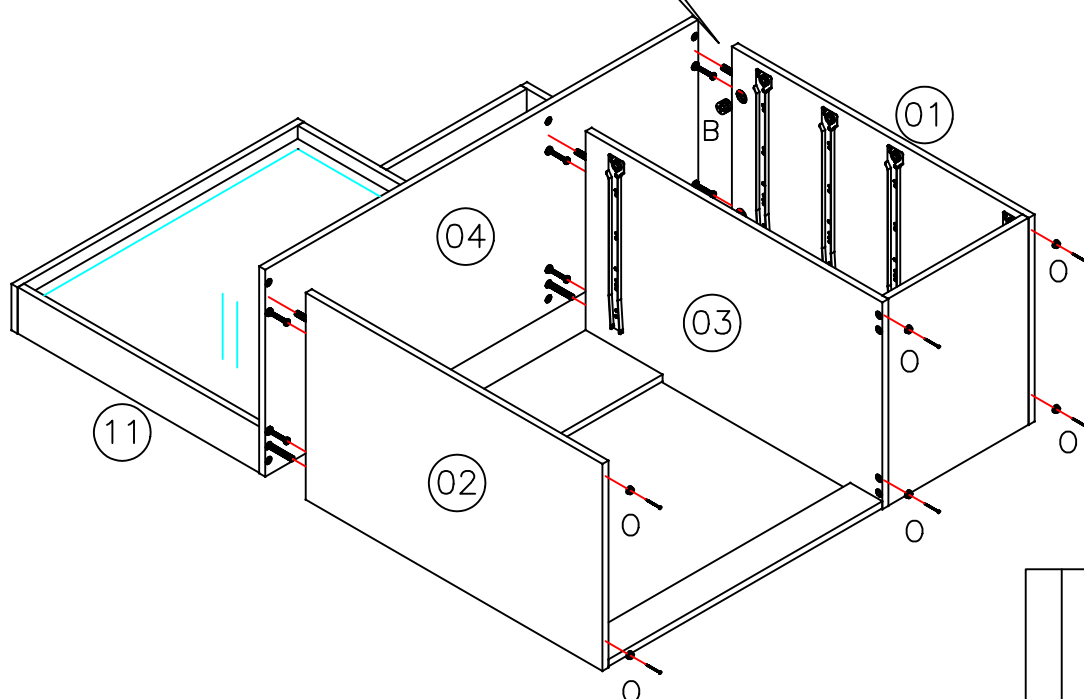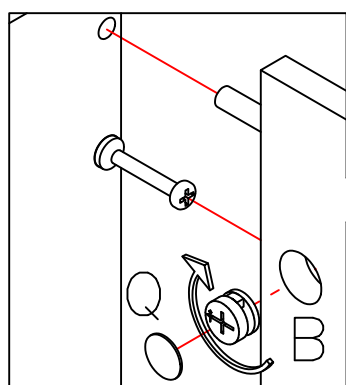

27


I		38
U		4

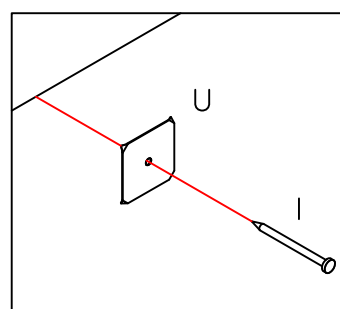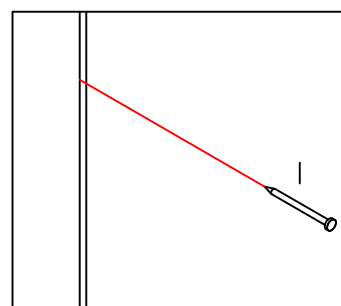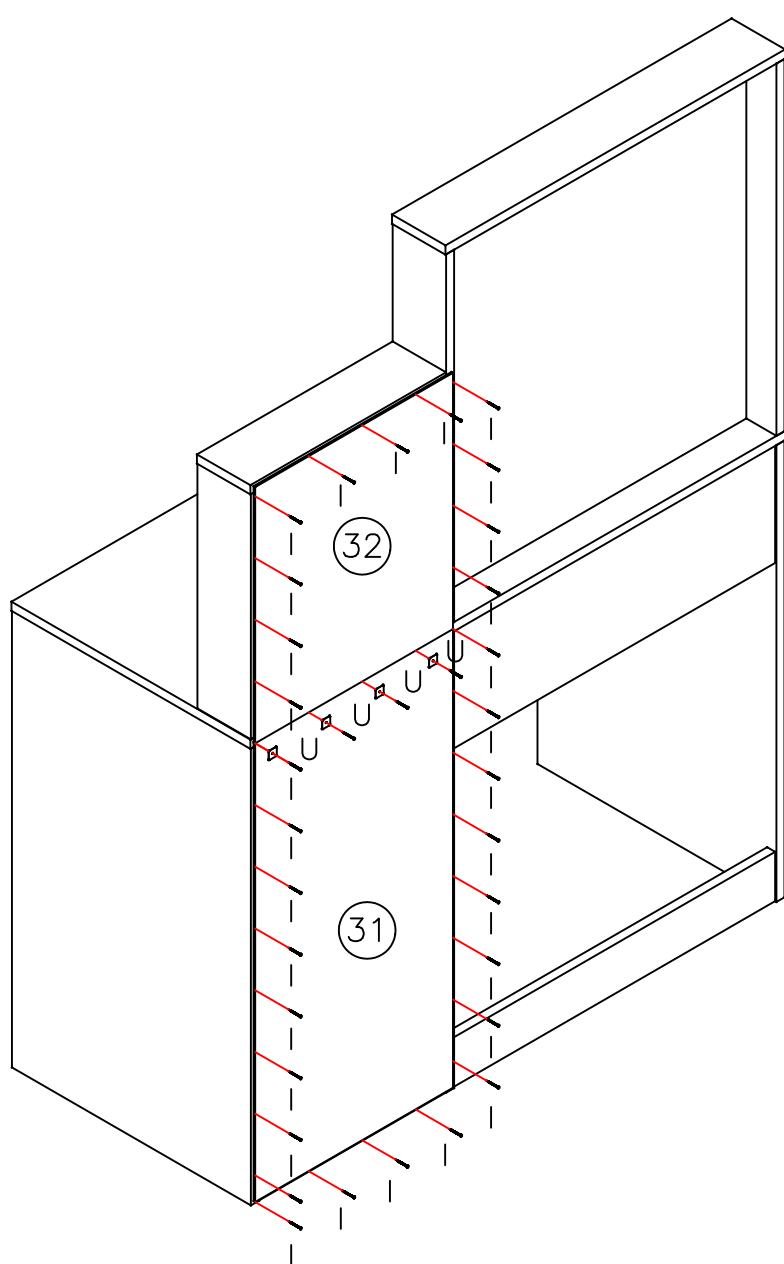


28

NOTE: Do not turn the DRYWALL ANCHOR into a wall stud. If you prefer to fasten the SAFETY ANTI-TIPPING to a wall stud, go to your local hardware store for proper hardware.


Compress the wings of anchor before inserting.

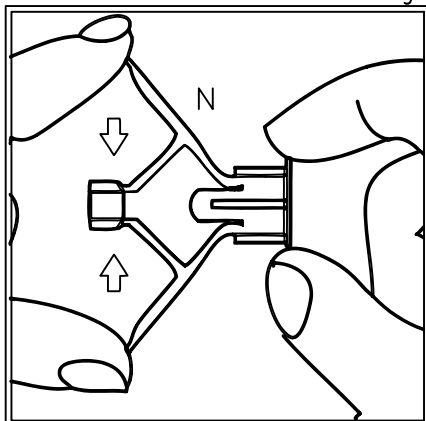

Insert the chuck into the hole of the base material.

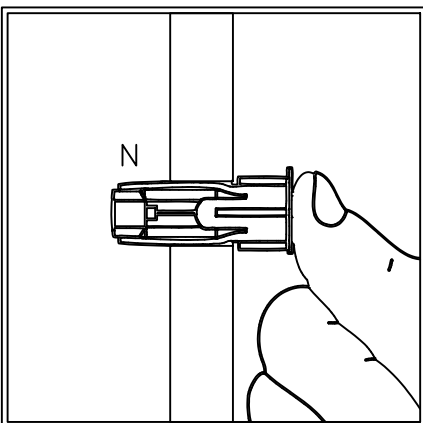

Position the object over the bushing and secure it with a screw.

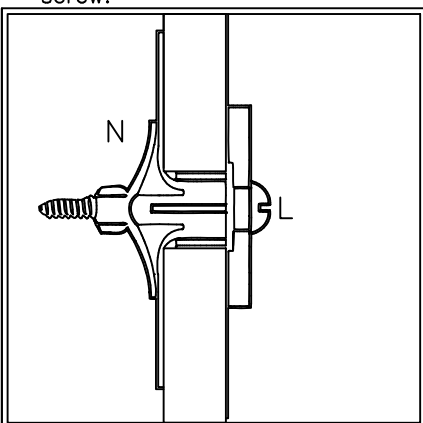

▲ WARNING –Anti-Tip Advisory

Potential of serious fatal crushing injuries may occur from furniture tip-over. To help prevent tip-over:

ALWAYS INSTALL the tip-over restrain that came with your furniture. This tip-over restrains only reduces but does NOT completely eliminate the risk of tip-over




- ALWAYS Place the heaviest items in the lowest/bottom drawer.
- NEVER place TV's or other heavy objects on top of this product.
- NEVER allow children to scale/climb/hang on the drawers, doors, or shelves.
- NEVER open more than one drawer at a time.

B ADVERTENCIA – Aviso antivuelco

Pueden producirse lesiones graves por aplastamiento mortales debido al vuelco de los muebles. Para ayudar a prevenir vuelcos:


- SIEMPRE INSTALE el sistema de retención que viene con sus muebles. Este sistema antivuelco solo reduce pero NO elimina por completo el riesgo de vuelco.
- SIEMPRE coloque los artículos más pesados en el cajón más bajo /inferior.
- NUNCA coloque televisores u otros objetos pesados encima de este producto.
- NUNCA permita que los niños escalen, trepen o se cuelguen de los cajones, puertas o estantes.
- NUNCA abra más de un cajón a la vez

Anti-tipping installation			
J		Mounting bracket	2
K		Clamp	1
L		Screw 4,5x50	2
M		Screw 3,5x16 B0	2
N		Adapter sleeve	2

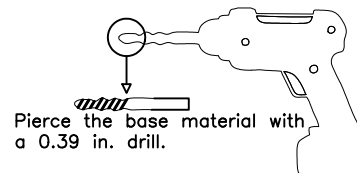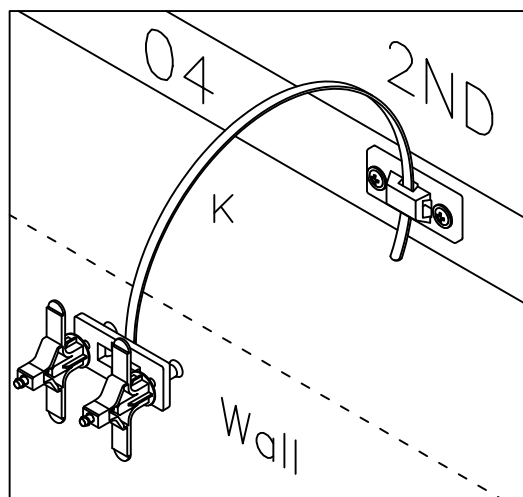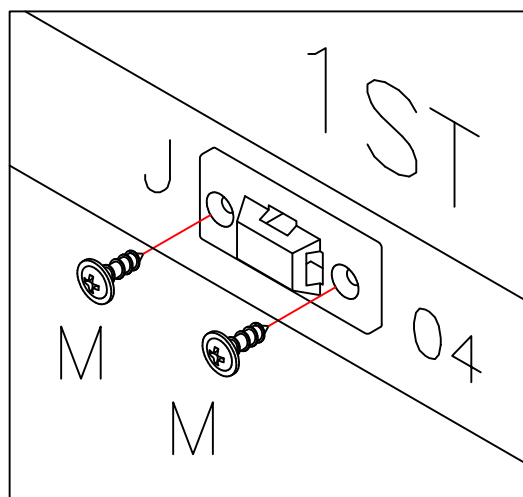

Important

- The minimum length of the screw must be the bushing length + object thickness that will be fixed.
- To guarantee the wing expansion function of the bushing, after the screw head is at the object to be fixed, one must continue to rotate the screw until maximum torque is reached.

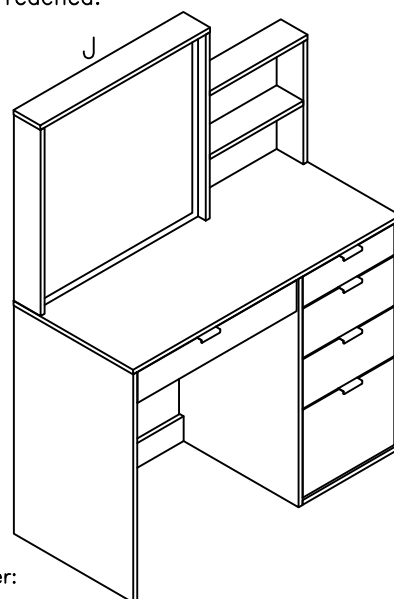

29



Drawer installation

